

PIN 22 Roll Bar (r129 SL-Class)

- 1 No fault
- 2 Roll bar control unit
- 3 Voltage Supply
- 4 Driver seat belt lock relay, open circuit, short circuit to terminal 30 or 31
- 5 Passenger seat belt lock relay, open circuit, short circuit to terminal 30 or 31
- 6 Roll bar deployment solenoid, open circuit, short circuit to terminal 30 or 31
- 7 Left and/or right rear axle switch, roll bar short circuit to terminal 30 or 31
- 8 Roll bar warning lamp
- 9 SRS warning lamp
- 10 SRS control unit