

PIN 30 Airbag (SRS) Codes

- 1 No Fault
- 2 SRS Control Module
- 3 Driver Airbag Squib
- 4 Front passenger airbag squibs
- 5 Left front seat belt buckle switch
- 6 Right front seat belt buckle switch
- 7 Front passenger airbag resistance
- 8 Voltage supply circuit
- 9 SRS malfunction indicator lamp or time limit for readout exceeded
- 10 SRS Control Module