

PIN 14(16) or 7(38) - Cruise Control/Idle Speed Control w/o ASR

- 1 No fault
- 2 Cruise control/idle speed control module
- 3 cCruise control/idle speed control actuator
- 4 Cruise control switch
- 5 Stop lamp switch
- 6 Starter lock-out/backup lamp switch
- 7 Data bus (CAN)
- 8 Left front axle vehicle speed sensor
- 9 Left rear axle vehicle speed sensor or Hall-effect speed sensor.
Rear Axle vehicle speed sensor from ABS control module
Rear Axle vehicle speed sensor from ETS/SPS control module
Incorrect CC/ISC control module installed ETS signal
- 10 Engine speed (RPM) signal (TNA)
- 11 Fuel safety shut-of to LH-SFI control module
- 12 Cruise control/idle speed control voltage supply