

PIN 8 Ignition (r129 300sl)

- 1 No fault
- 2 Maximum retard setting on at least one cylinder has been reached
- 3 Coolant temperature sensor defective
- 4 Load sensor in EZL/AKR ignition control unit defective
- 5 Knock sensors 1 and/or 2 defective
- 6 Camshaft position sensor defective
- 7 Knock control-output switch in EZL/AKR ignition control unit defective
- 8 Transmission overload protection switch does not close
- 9 Transmission overload protection switch does not open
- 10 Data exchange from EZL/AKR ignition control unit to CIS-E defective
- 11 Reference resistor defective
- 12 TN engine speed signal is outside the tolerance range
- 13 Full load contact does not open
- 14 Idle speed contact does not open
- 15 Ignition coil 1 output from EZL/AKR ignition control unit defective
- 16 (500SL only) Ignition coil 2 from EZL/AKR ignition control unit defective
- 17 Crankshaft position sensor defective