


<p><b>C5</b> AR30.12-P-3022B</p>	<p><b>Removing and installing firewall pivot point together with accelerator pedal lever</b></p>	<p><b>15.12.94</b></p>
----------------------------------	--	------------------------

**MODEL 170, 208, 210**

- 33 Accelerator pedal lever
- 34 Firewall pivot point
- 37 Bracket with expanding bolt

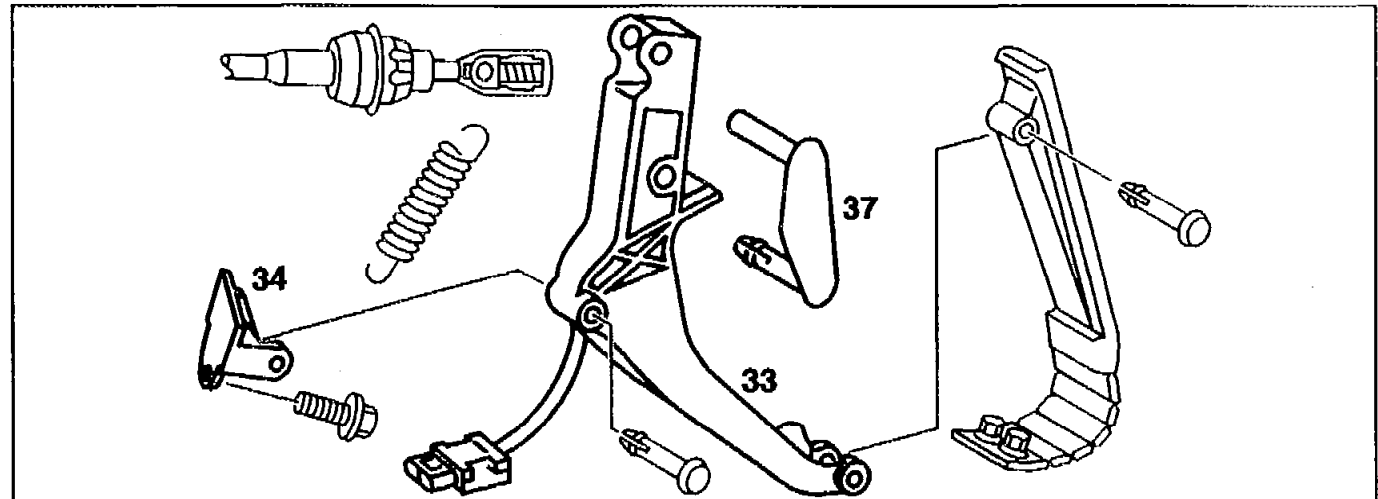

P30.12-0203-04

Fig. item, etc.	Work instructions		
<p><b>i</b></p>	<p>Remove accelerator pedal, install</p>		<p>AR30.12-P-1321D <b>P4</b></p>
<p><b>i</b></p>	<p>Check accelerator control, adjust</p>	<p>Engine 104.945/995                      Engine 111.921/942/945/946/970/974                      Engine 111.920/940/941/944/960/961/975 up to 31.08.96                      Engine 111.943/947/973, 602.982</p>	<p>AR30.10-P-1010DA <b>A2</b>                      AR30.10-P-1010G <b>G2</b>                      AR30.10-P-1010D <b>J1</b></p>

		Engine 111.944/975 as of 01.09.96 ↓ manual transmission	AR30.10-P-1010C	<b>A1</b>
		automatic transmission	AR30.10-P-1010CA	<b>E1</b>
		Engine 119.985	AR30.10-P-1010EC	
		Engine 604.912, 605.912, 606.912: ↓		
		Engine 604.910, 605.910 /960 in model 202 with automatic transmission 722.4	AR30.10-P-1010HB	
		Engine 604.912, 605.912, 606.912 in model 210 with automatic transmission 722.4	AR30.10-P-1010HD	
		Engine 602.982, 604, 605, 606.91 with manual transmission 717.4	AR30.10-P-1010HC	
		Engine 602.982, 604, 605, 606.91, 606.962 with automatic transmission 722.6		
		Engine 606.962	AR30.10-P-1010CA	<b>E1</b>