

C3

AR47.10-P-4100E


Removing and installing fuel tank

3.8.94

MODEL 202, 208

Fuel tank system with diesel engine


- 80 Fuel tank
- 80/1 Nut
- 80/2 Tensioning straps
- 80/3 Shield
- 80/7 Nuts
- 80/8 Sound insulation mat
- 83/1 Hose clip
- 90/11 Fuel return hose
- 90/12 Fuel suction hose
- 91 Air inlet pipe
- 91/1 Clip
- 92 Vent pipe
- Y23 Fuel metering pump (only on model 202.133/193)

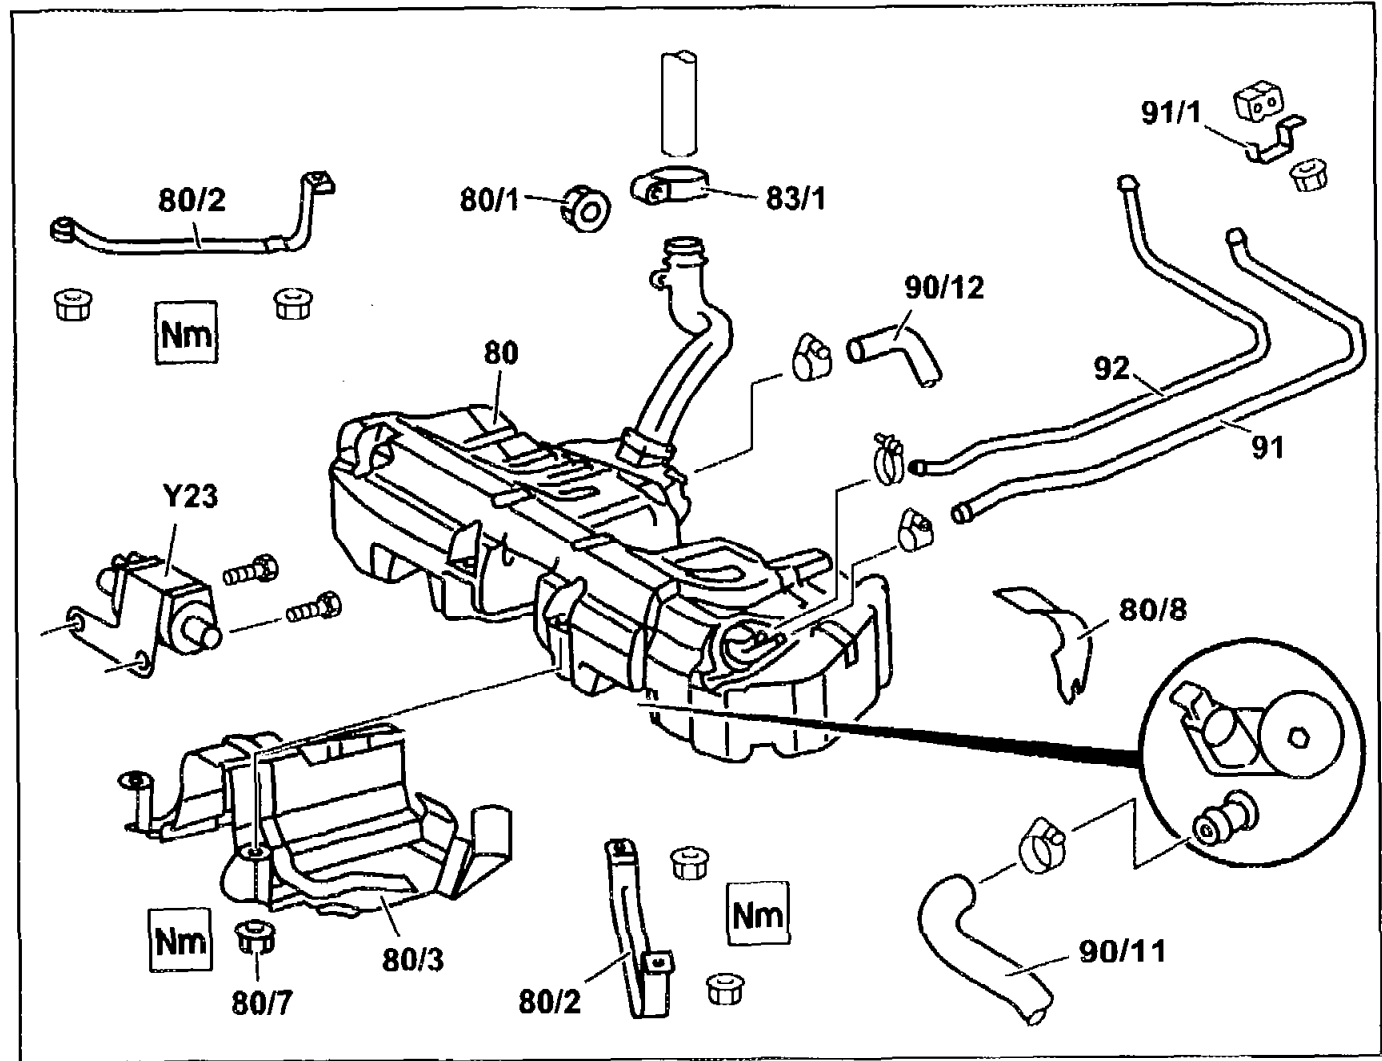



Fuel tank system with gasoline engine

- 80 Fuel tank
- 80/1 Nut
- 80/2 Tensioning straps
- 80/3 Shield
- 80/7 Nuts
- 80/8 Sound insulation mat
- 83/1 Hose clip
- 84/6 Degassing hose
- 90/11 Fuel return hose
- 90/12 Fuel suction hose
- 91 Air inlet pipe
- 91/1 Clip
- 92 Vent pipe
- M3m1 Fuel pump

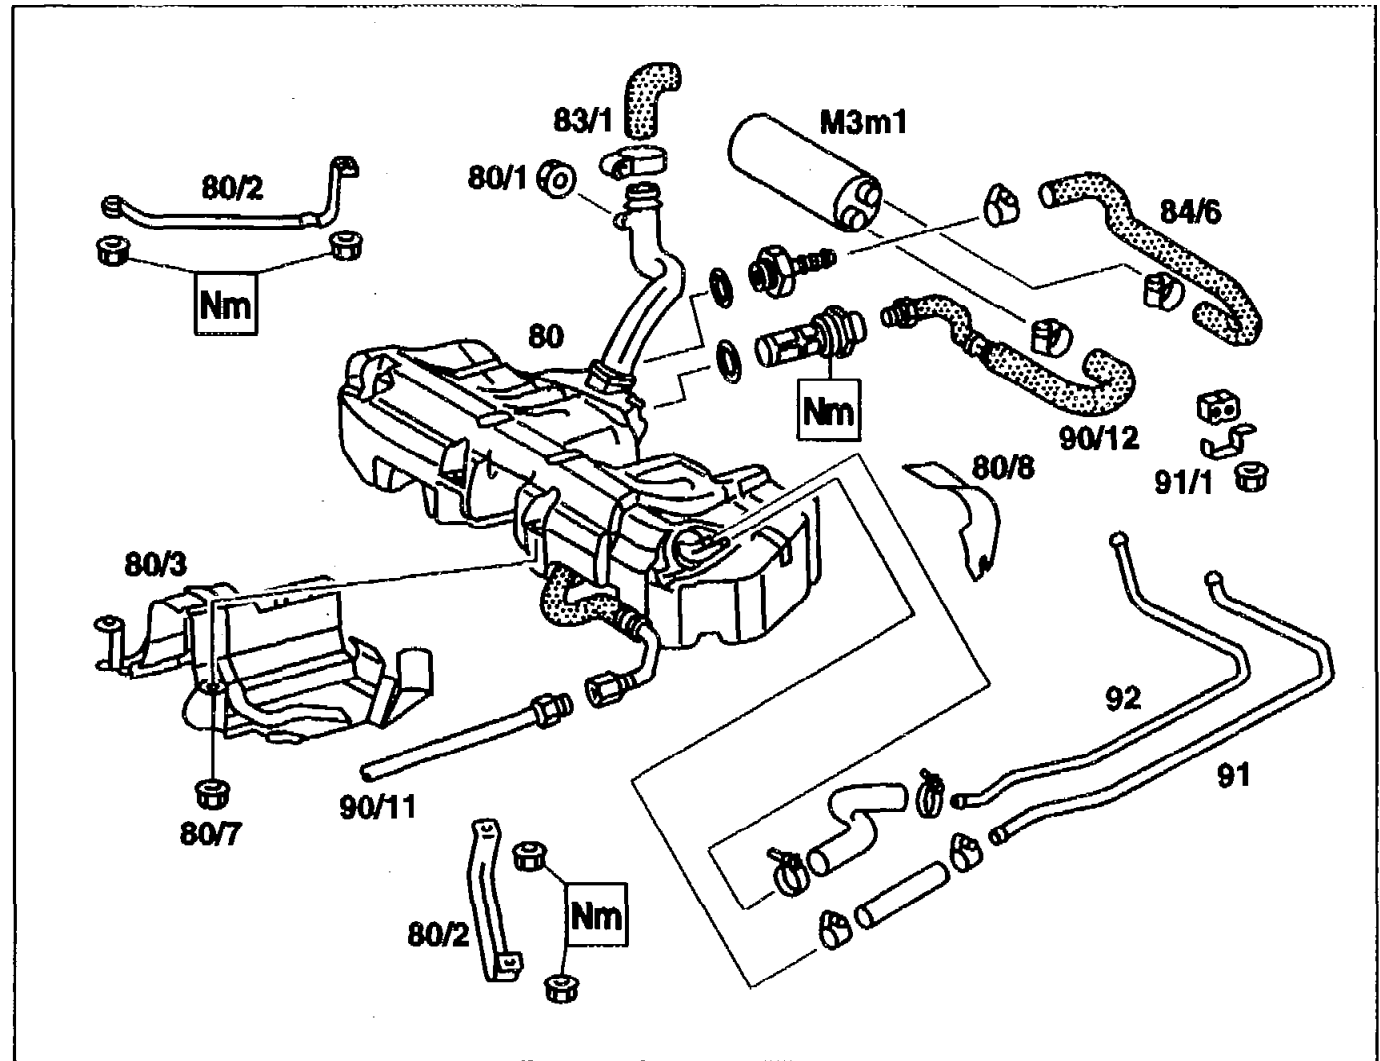





P47.10-0324-06

Modification notes

12.8.97	Unbolting fuel metering pump (Y23) on model 202.133/193		
---------	---	--	--



	Removing, installing		
Danger!	Risk of explosion as a result of fuel vapors igniting. Risk of poisoning as a result of inhaling fuel vapors. Risk of injury as a result of fuel coming into contact with skin and eyes.	No fire, naked flame or smoking. Pour fuels only into suitable and appropriate marked containers. Wear protective clothing when handling fuel.	AS47.00-Z-0001-01A D17
1	Empty fuel tank, fill		AR47.10-P-4001E K1
2	Remove rear suspension completely, install		AR35.10-P-0010D
3	Remove inner liner in rear wheelhouse, install	Rear right Model 202	AR88.10-P-1400E
4	Slacken hose clip (83/1) of the connection hose at the bottom of the filler neck		
5	Pinch off fuel hose (90/12) at the suction side and vent hose (84/6) with Pierburg fuel pump	Model 202.018, 208	
6	Unscrew nut (80/1) at bottom of filler neck		
7.1	Unbolt fuel metering pump (Y23)	Model 202.133/193 On right in front of fuel gage sender	
8	Take off tensioning straps (80/2)	Support fuel tank with lift for this step 	BA47.10-P-1003-01A
9	Detach insulating matting (80/8)	Lower lift about 30 cm for this step	

 BT	Insulating matting discontinued, fuel tank modified	Model 202	BT47.10-P-0002-01A H17
10	Unscrew nuts (80/7) of fuel tank		BA47.10-P-1002-01A
11	Remove fuel strainer	Clean and inspect for re-use 	BA47.10-P-1005-01A
12	Install in the reverse order		
13	Dispose of fuel tank		
 OS	Disposing of fuel tanks		OS47.10-P-0001-01A F18

 Fuel tank

Number	Designation		Model 202	Model 208
BA47.10-P-1002-01A	Nut on fuel tank	Nm	20	20
BA47.10-P-1003-01A	Nut for tensioning straps	Nm	40	40
BA47.10-P-1005-01A	Fuel strainer in fuel tank	Nm	40	40