



J4

AR47.10-P-7000BA

Removing and installing fuel level gauge sensor


30.11.95

MODEL 210.206 /210 /217 /225 /235 /237 /245 /265 /270 /272 /274 /281 /282

89/2 Gasket


B4 Fuel gauge sender

Arrow Connector

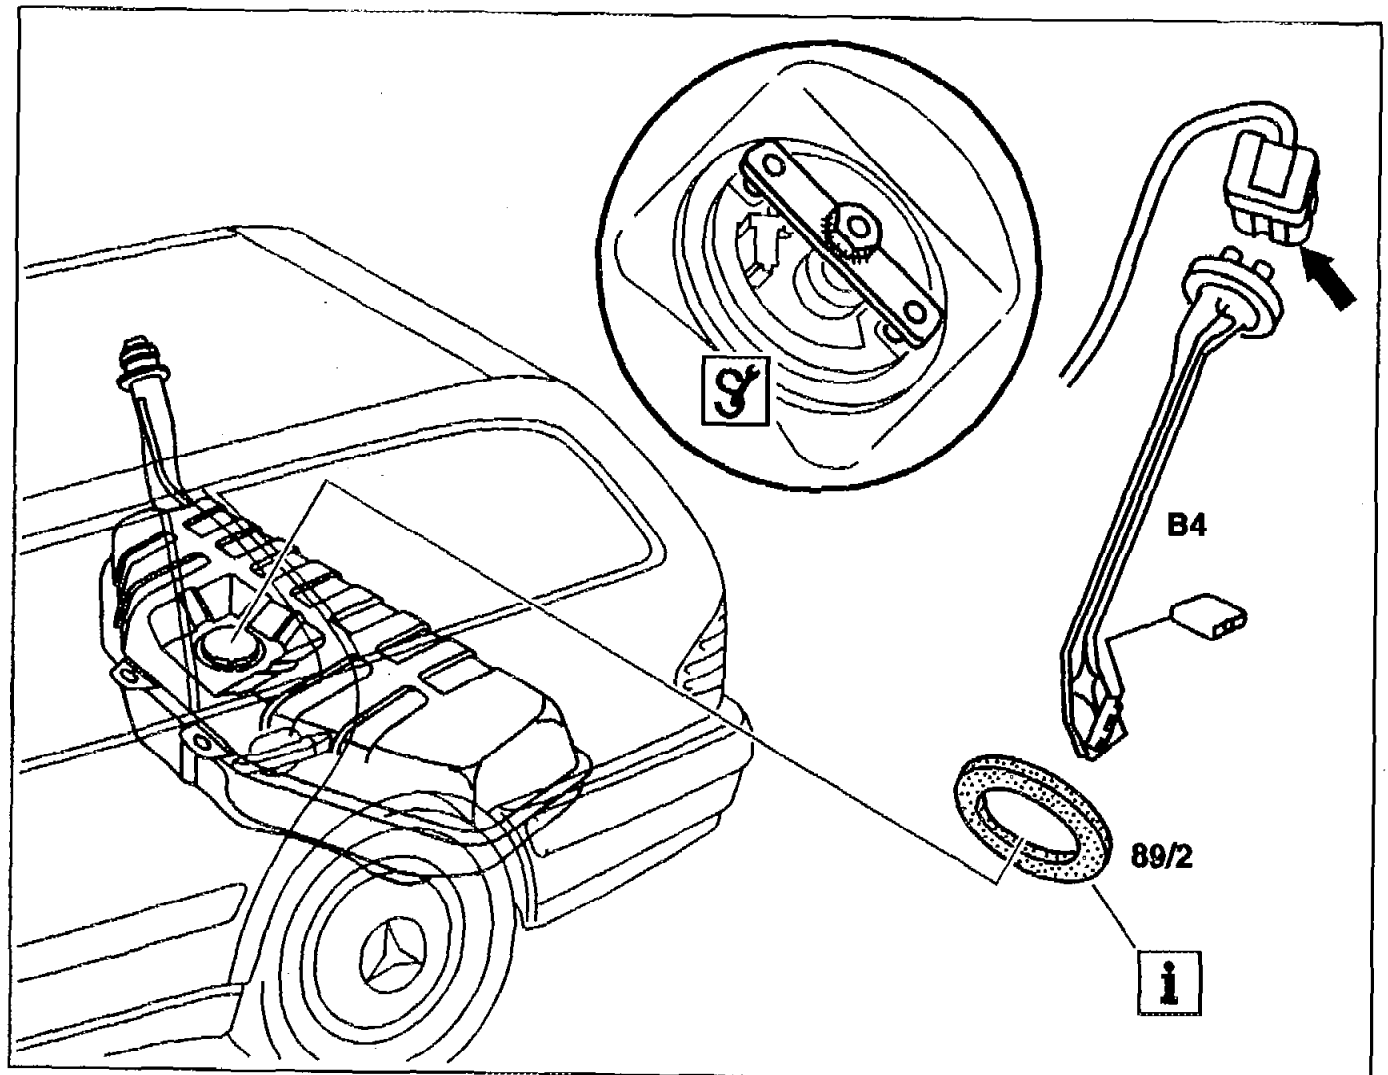



	Removing, installing		
⚠ Danger!	Risk of explosion from ignition. Risk of poisoning from inhaling and swallowing fuel. Risk of injury as a result of fuel coming into contact with skin and eyes.	No fire, naked flame or smoking. Pour fuels only into suitable and appropriately marked containers. Wear protective clothing when handling fuel.	AS47.00-Z-0001-01A D17
1.1	Pump out fuel	If fuel tank is full, about 8 liters ↓ Draining fuel tank, filling.	AR47.10-P-4001B H1
2	Remove trim for fuel tank in trunk		
3	Unplug coupling (arrow) for fuel gauge sensor (B4) (and pressure sensor, only)	Fuel gauge sensor (B4) and pressure sensor form a unit.	
4	Open bayonet lock of fuel gauge sender (B4)		210 589 01 07 00
5	Take out fuel gauge sender (B4)	Installation: replace gaskets (89/2). Oil to facilitate installation.	
6	Install in the reverse order.		

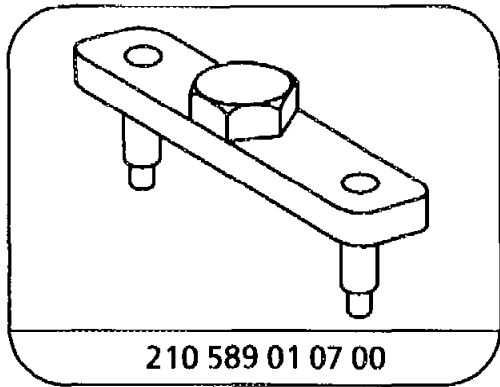

Pin wrench