

B6	AR47.10-P-7541E	Removing and installing fuel tank filler neck	3.8.94
----	-----------------	---	--------

**MODEL 202 up to 31.3.96**


45/4 Inner cup seal

45/5 Outer cup seal


A Outer skin

B Wheel house

Arrow Direction of installation

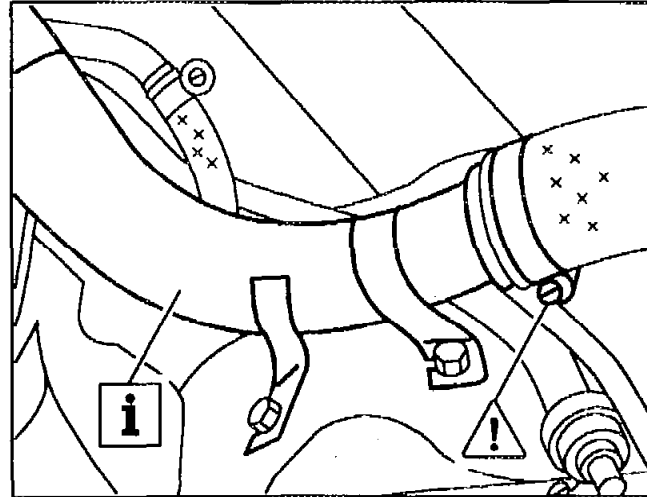


P47.10-0222-01

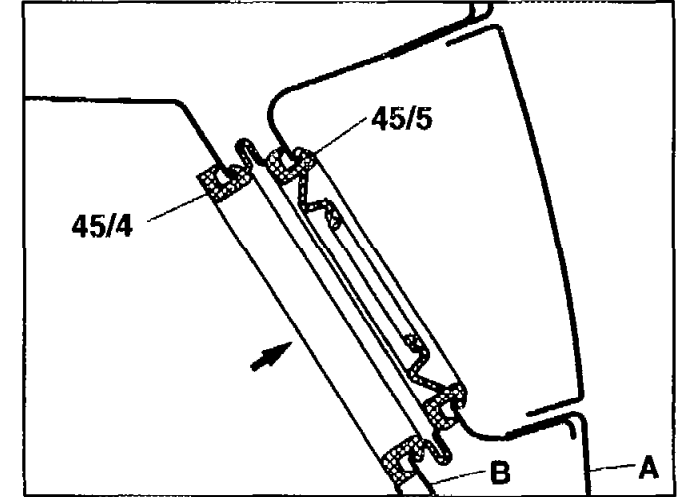

P47.10-0223-01

Fig. item, etc.	Work instructions		
<b>Danger!</b>	<b>Risk of explosion from ignition. Risk of poisoning from inhaling and swallowing fuel. Risk of injury as a result of fuel coming into contact with skin and eyes.</b>	No fire, naked flame or smoking. Pour fuels only into suitable and appropriately marked containers. Wear protective clothing when handling fuel.	AS47.00-Z-0001-01A <b>D17</b>
	Hose clip	Pump out about 8 liters of fuel if fuel tank is full ↓ Empty fuel tank, fill	AR47.10-P-4001E <b>K1</b>

	Filler neck	<p>Take out downward together with cup seals (45/4, 45/5), insert. Inspect connection, vent hose and cup seals to ensure they can be re-used; replace if necessary.</p> <p><b>Installation note</b> Insert filler neck, fit in inner cup seal and then outer cup seal (see fig.). Ensure they are correctly located.</p>	
---	-------------	--	--