





H6 AR47.10-P-8021E	Removing and installing expansion reservoir	3.8.94
-----------------------	---------------------------------------------	--------

**MODEL 202 up to 31.3.96**

- 91/2 Vent pipe
- 91/2a Vent hose
- 93 Expansion reservoir

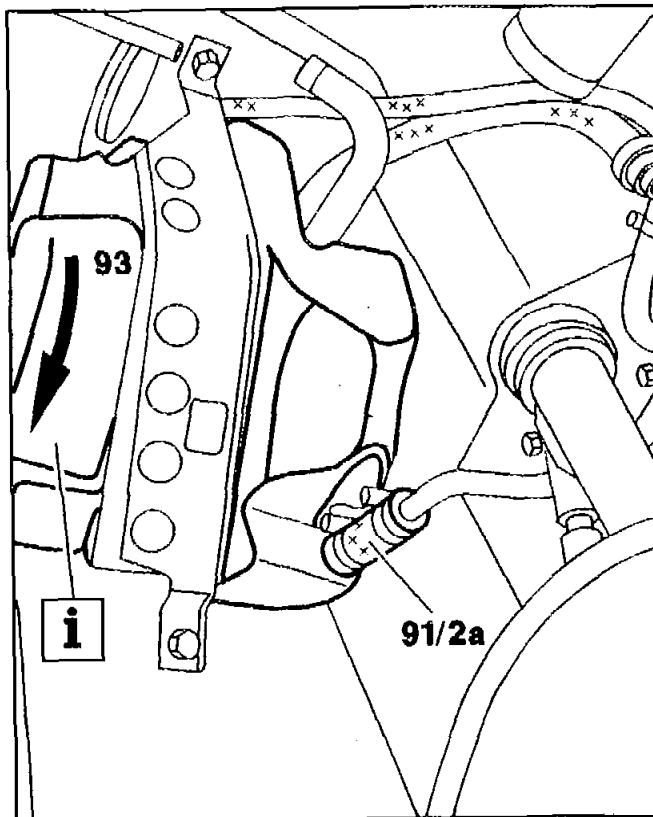

P47.10-0224-02

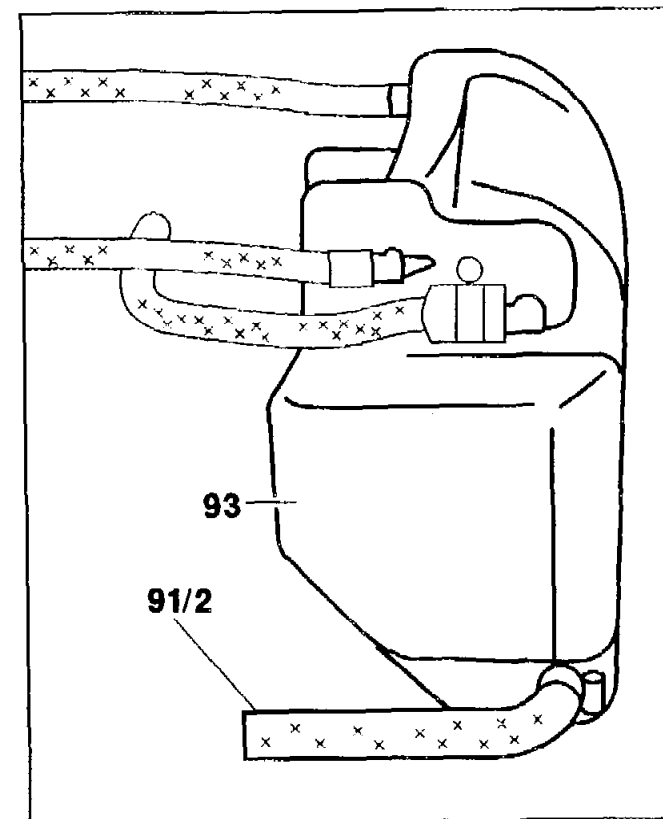

P47.10-0225-02



	Removal, installation		
<b>Danger!</b>	<b>Risk of explosion</b> from ignition. <b>Risk of poisoning</b> from inhaling and swallowing fuel. <b>Risk of injury</b> as a result of fuel coming into contact with skin and eyes.	No fire, naked flame or smoking. Pour fuels only into suitable and appropriately marked containers. Wear protective clothing when handling fuel.	AS47.00-Z-0001-01A <b>D17</b>
1	Remove filler neck, install		AR47.10-P-7541E <b>B6</b>
2	Push vent hose (91/2a) over vent pipe (91/2)		
3	Push vent pipe (91/2) forward		
4	Take out expansion reservoir (93)	To do this, tilt expansion reservoir (93) down from above (arrow)	
<b>BT</b>	Install in the reverse order  Expansion reservoir with filler neck modified	If no expansion reservoir of the same version is available for installation, install expansion reservoir of new version  Model 202.0: install guide funnel  Model 202 as of 1.3.96	AR47.10-P-7571-01E <b>F15</b>  AR47.10-P-7571D <b>D6</b>  BT47.10-P-0003-01A <b>K17</b>