



K6

AR47.10-P-8021F


Removing and installing expansion reservoir

7.1.97

**MODEL 202 as of 1.3.96,  
208**

*Illustrated on models 202, 208.3*

93 Expansion reservoir

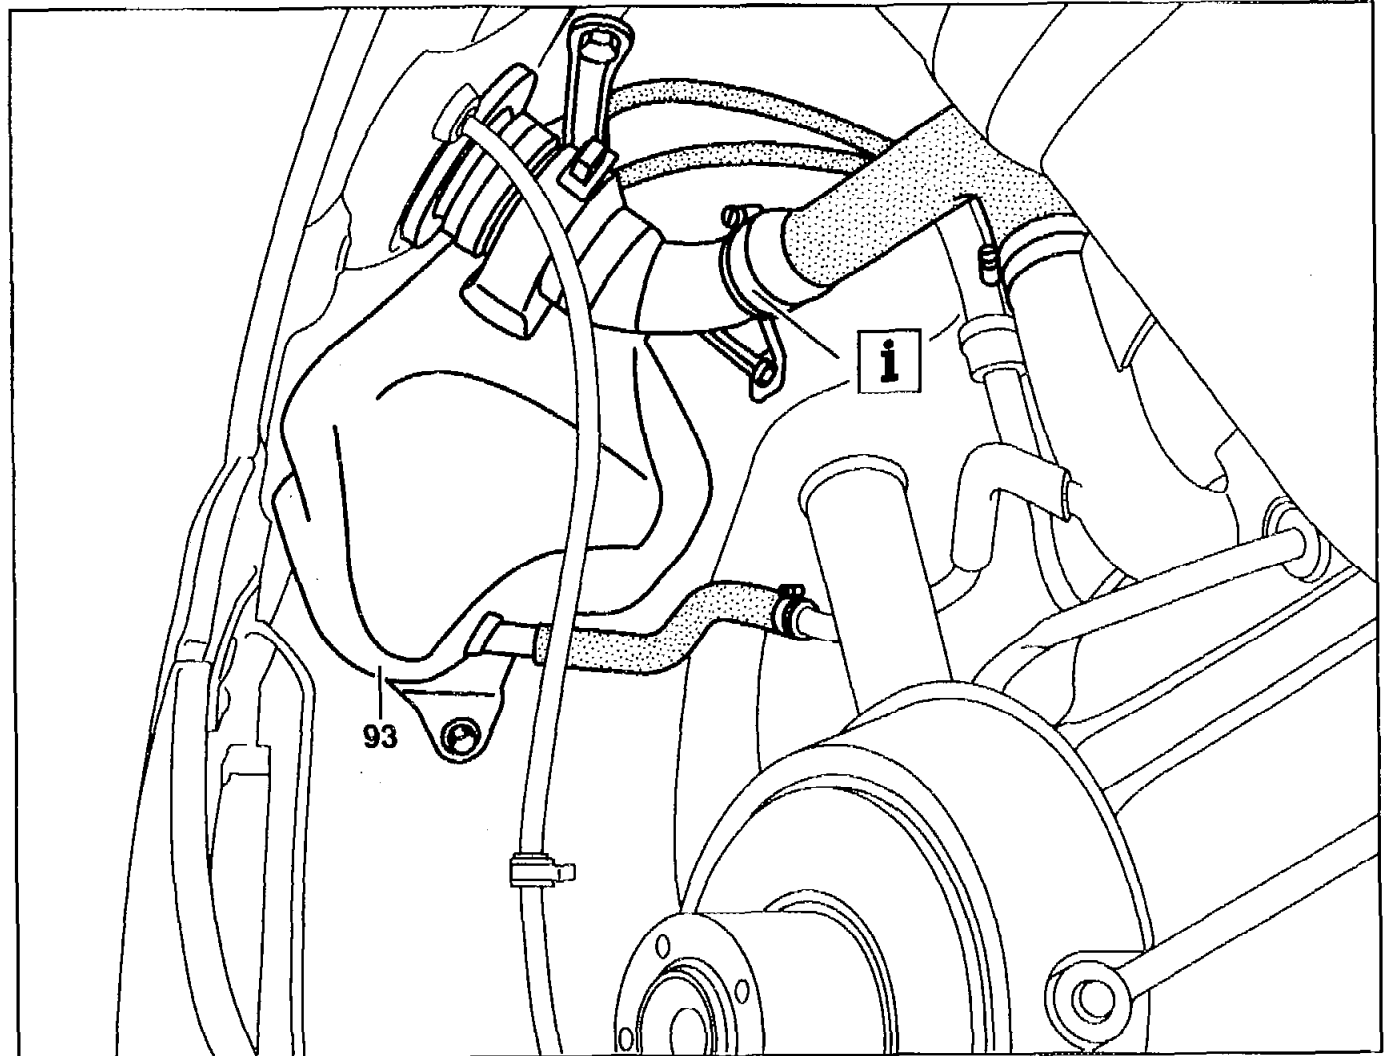



|                  |   |  |                                  |
|------------------|---|--|----------------------------------|
|                  | <b>Removing, installing</b>   |  |                                  |
| <b>⚠ Danger!</b> | <b>Risk of explosion from ignition. Risk of poisoning from inhaling and swallowing fuel. Risk of injury as a result of fuel coming into contact with skin and eyes.</b> | No fire, naked flame or smoking.<br>Pour fuels only into suitable and appropriately marked containers.<br>Wear protective clothing when handling fuel. | AS47.00-Z-0001-01A<br><b>D17</b> |
|                  | Hose clip   | If fuel tank is full, pump out about 8 liters of fuel ↓<br>Emptying fuel tank, filling   | AR47.10-P-4001E <b>K1</b>        |
| 1                | Disconnect vent hoses and connection hose   |  |                                  |
| 2                | Take expansion reservoir together with filler neck (93) and cup seal down and out   | Inspect connection, vent hoses and cup seal for reuse, replace if necessary  |                                  |
| 3                | Remove guide funnel   | Models 202.0, 208  | AR47.10-P-7571D <b>D6</b>        |
| 4                | Install in the opposite order   |  |                                  |