

C9

AR47.31-P-8022A

Removing and installing safety valve


17.7.97

ENGINE 112.941 in MODEL 210.065 /082 with CODE (491) as of Model Year 98 U.S. version

ENGINE 113.940 in MODEL 210.070 with CODE (491) as of Model Year 98 U.S. version

ENGINE 113.980 in MODEL 210.074 with CODE (491) as of Model Year 99 U.S. version

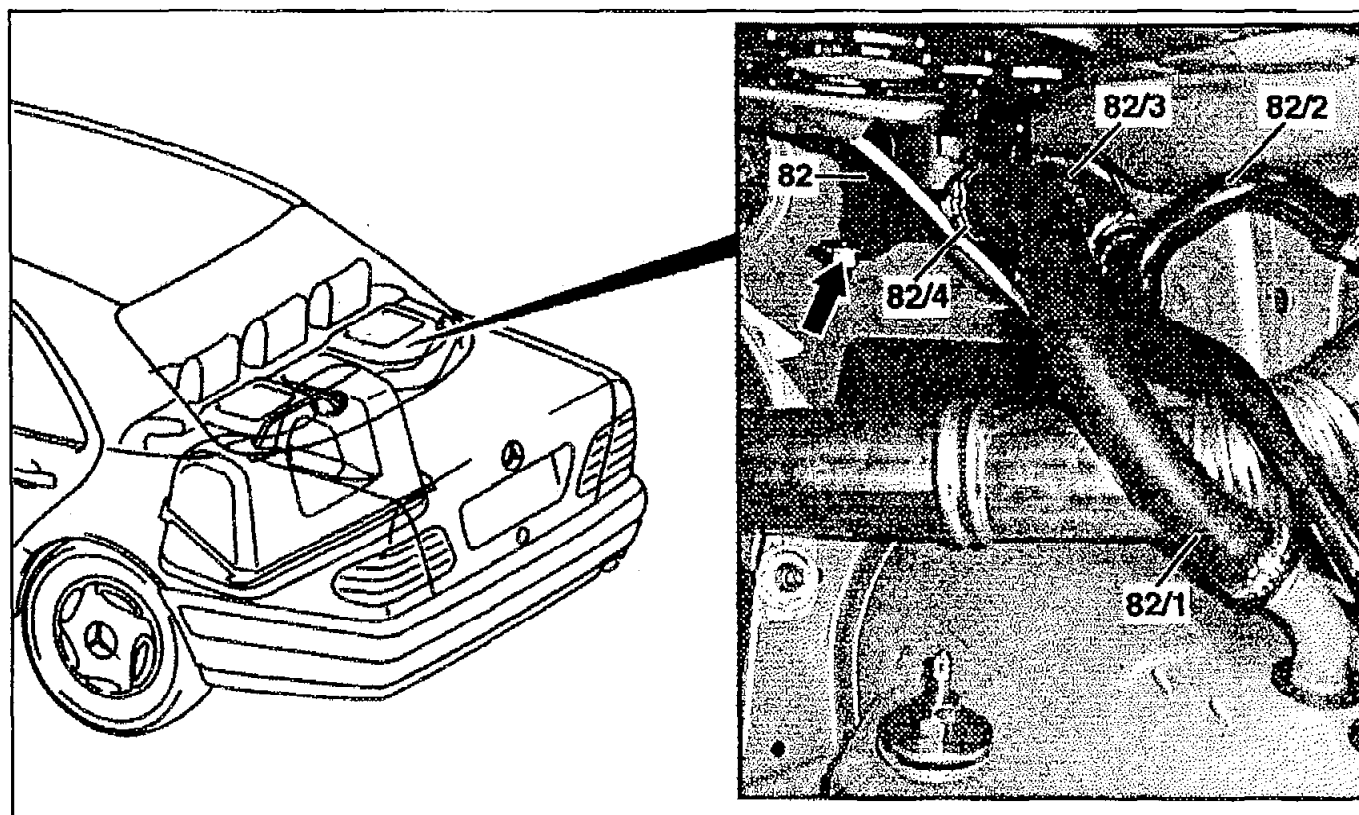

- 82 Pressure relief valve
- 82/1 Fuel overflow pipe
- 82/2 ORVR vent pipe
- 82/3 Vent line
- 82/4 Hose clip
- Arrow Nuts



P47.31-0203-05



Removing, installing

 Danger!	Risk of explosion from ignition. Risk of poisoning from inhaling and swallowing fuel. Risk of injury as a result of fuel coming into contact with skin and eyes.	No fire, naked flame or smoking. Pour fuels only into suitable and appropriately marked containers. Wear protective clothing when handling fuel.	AS47.00-Z-0001-01A D17
1	Remove trim panel of fuel tank and also right side trim panel of trunk		
2	Remove fuel overflow line (82/1) and vent line (82/3)	 Replace hose clips (82/4).	
3	Remove pressure relief valve (82)		
4	Install in the reverse order		