



H9


AR47.31-P-8023A

Removing, installing shutoff valve

17.7.97

**ENGINE 112.941 in MODEL 210.065 /082 with CODE (491) USA version**  
**ENGINE 113.940 in MODEL 210.070 with CODE (491) USA version**  
**ENGINE 113.980 in MODEL 210.074 with CODE (491) USA version**

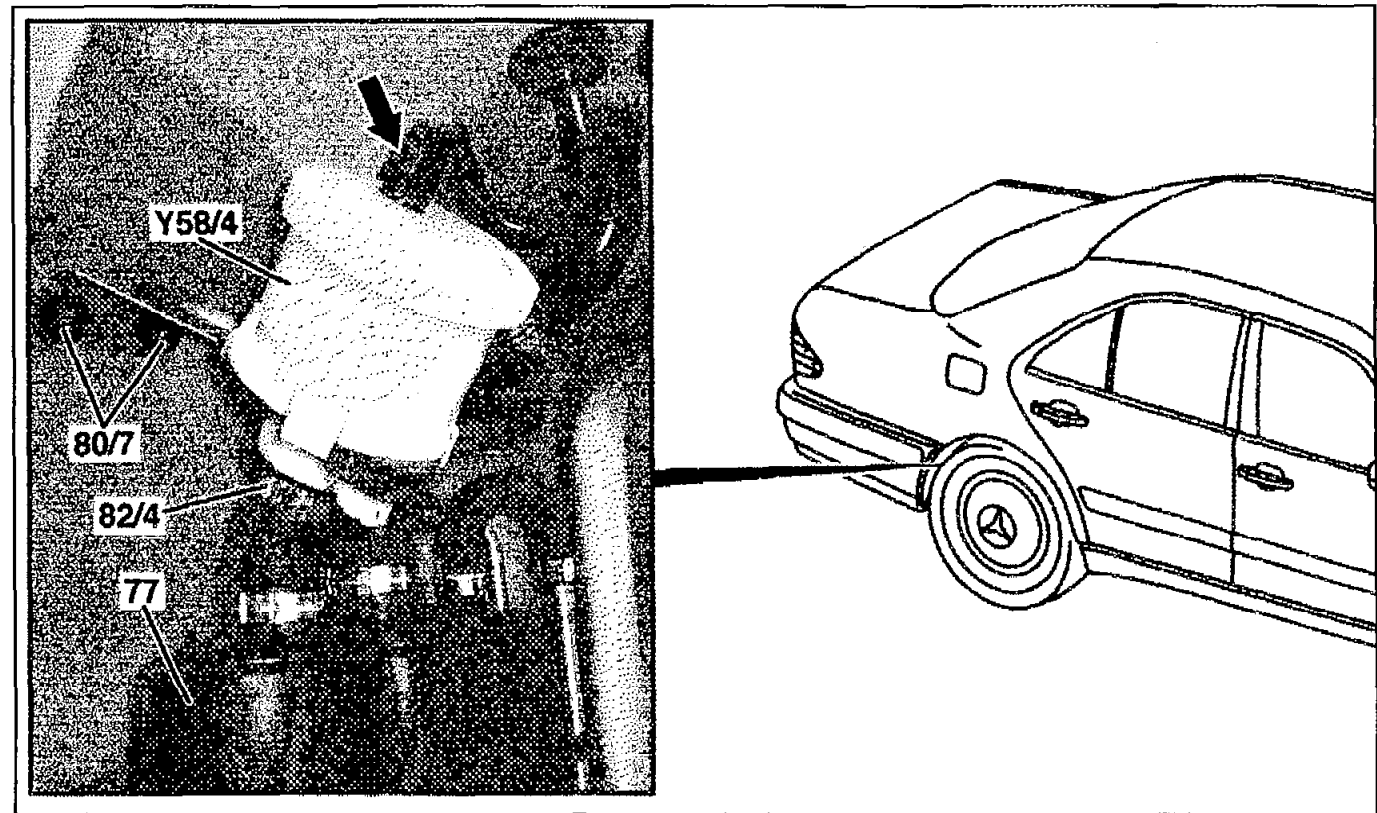

- 77 Activated charcoal canister
- 80/7 Plastic nuts
- 82/4 Hose clip
- Y58/4 Shutoff valve
- Arrow Connector



P47.31-0202-05

Fig. item etc.

Work instructions

 <b>Danger!</b>	<b>Risk of explosion</b> from ignition. <b>Risk of poisoning</b> from inhaling and swallowing fuel. <b>Risk of injury</b> as a result of fuel coming into contact with skin and eyes.	No fire, naked flame or smoking. Pour fuels only into suitable and appropriately marked containers. Wear protective clothing when handling fuel.	AS47.00-Z-0001-01A <b>D17</b>
	Rear right wheelhouse liner	remove	
80/7	Plastic nuts	unscrew	
82/4	Hose clip	replace	
Y58/4	Shutoff valve	remove	
Arrow	Connector	unplug	