


A9	AR47.30-P-8212GH	Removing and installing activated charcoal canister	20.3.97
----	------------------	---	---------

**MODEL 163.136 with ENGINE 111.977**  
**MODEL 163.154 with ENGINE 112.942**  
**MODEL 163.172 with ENGINE 113.942**

- 77 Activated charcoal canister
- 80 Fuel tank

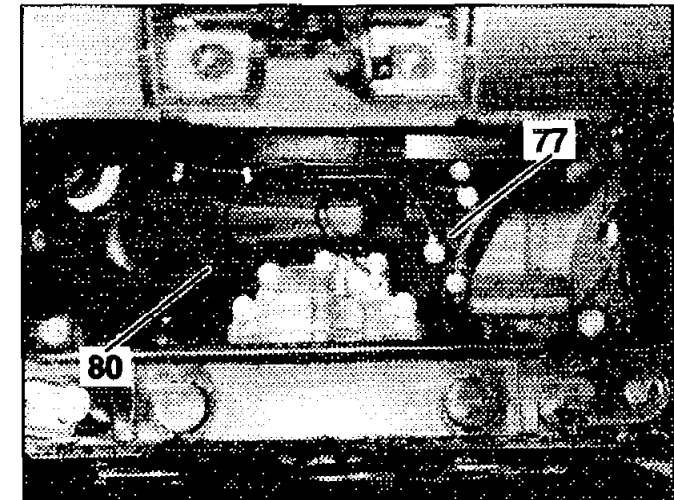

P47.30-0301-01

Fig. item, etc.	Work instructions		
<p><b>⚠ Danger!</b></p>	<p><b>Risk of explosion from ignition. Risk of poisoning from inhaling and swallowing fuel. Risk of injury as a result of fuel coming into contact with skin and eyes.</b></p>	<p>No fire, naked flame or smoking. Pour fuels only into suitable and appropriately marked containers. Wear protective clothing when handling fuel.</p>	<p>AS47.00-Z-0001-01A <b>D17</b></p>

77	Activated charcoal canister	<p><b>i</b> Activated charcoal canister (77) and fuel tank (80) form a unit</p> <p><b>If activated charcoal canister is faulty: ↓</b> Replace fuel tank and activated charcoal canister complete</p> <p><b>Removing see:</b> Removing and installing fuel tank</p>	AR47.10-P-4100GH <b>L3</b>
----	-----------------------------	--	----------------------------