


Power Windows

In addition to the power window operation explained in the regular Owner's Manual, the windows can also be opened or closed as described below.

Warning!

When leaving the vehicle, always remove the key from the steering lock. Do not leave children unattended in the vehicle. Unsupervised use of vehicle equipment may cause serious personal injury.

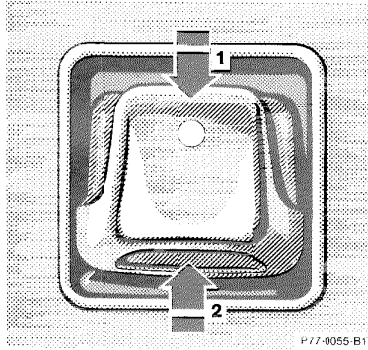

The switch is located in the center console.

- 1 to open
- 2 to close

The soft top handles must be in the locked position (pushed up) to operate the windows.

1. Turn key in steering lock to position 1 or 2 (with either door open also with key in steering lock position 0 or removed).
2. Slide soft top switch quickly two times and hold.
All four side windows open or close simultaneously.
3. Release switch when windows are in desired position.

Warning!

When closing the windows, be sure that there is no danger of anyone being harmed by the closing procedure.