




Seat Belt Warning System

With the key in steering lock position 2, an audible warning sounds for a short time if the driver's seat belt is not fastened.

When someone enters the car, the reminder lamp, located in the center console, flashes for a short time to remind all occupants to fasten seat belts.

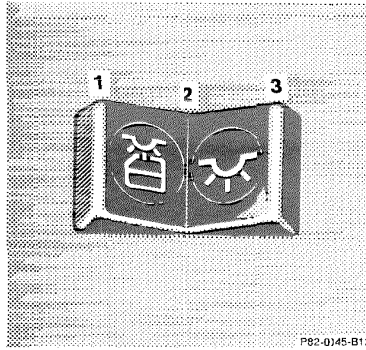


Interior Lighting

The switches are located above the inside rear view mirror.

Interior Lamps

- 1 Interior lamps are switched on, and off delayed, when unlocking or locking the vehicle, or when opening or closing either door. However, there will be no delay when the key is in steering lock position 2.
- 2 Interior lamps switched off.
- 3 Interior lamps switched on continuously.

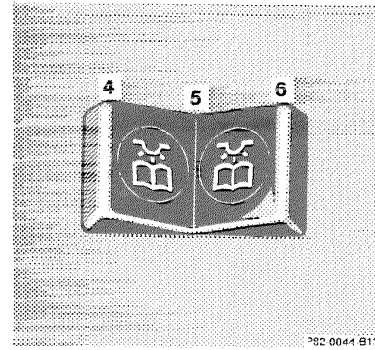

Reading Lamps

- 4 Left reading lamp switched on.
- 5 Reading lamps switched off.
- 6 Right reading lamp switched on.