



First Aid Kit

The first aid kit is located in the right trunk well.

Fuel Filler Cap

Independent of the central locking system, you can use the master or valet key to lock the fuel filler cap separately.

Fuses

Two additional fuse boxes (1 and 2) are located in front of the battery.

Before replacing a blown fuse, determine the cause of the short circuit.

Always use a new fuse for replacement. Never attempt to repair or bridge a blown fuse.

Changing Wheels

Warning!

Before working on the vehicle, e.g. when changing wheels, the roll bar should be raised with the switch, and the key be removed from the steering lock, to prevent possible injury.

Notes:

For raising the roll bar, see page 16.

For work instructions, refer to chapter "Wheels, changing", in the Owner's Manual index.