


License Plate Lamps (5 W bulb)

Loosen both the securing screws, remove lamp and take out bulb.

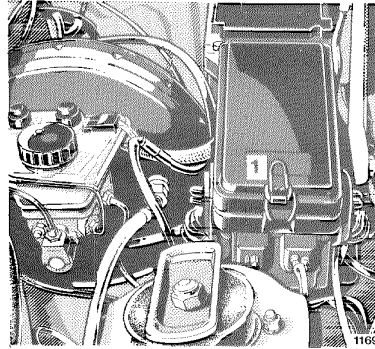

Fuses

The fuse box is located in the engine compartment.

All equipment protected by fuses is listed by number and letter on a label in the lid of the fuse box. The numbers and letters above the fuses correspond to the ones on the label.

To gain access to the fuses, release clamp (1), lift the fuse box cover up and remove.

Before replacing a blown fuse, determine the cause of the short circuit.

Spare fuses are furnished inside the fuse box. Observe amperage and color of fuse.

Always use a new fuse for replacement. Never attempt to repair or bridge a blown fuse.

After replacing the fuse, engage the fuse box cover at the rear and secure with clamp (1).