


Front seat head restraint

Head Restraints

Removing front seat head restraints:

Bring the head restraint to its highest position.

Depress release button (1) beneath the seatback covering material and pull head restraint up sharply, holding it by the left head restraint post (viewed in driving direction). Then pull out head restraint completely with both hands.

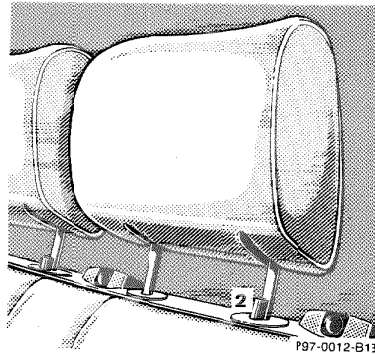

Rear seat head restraint

The release button (1) is located below the left head restraint post on both front seats.

Installing front seat head restraints:

Insert the head restraint and push it down to the stop.

Check if the highest position can be reached by pushing the switch up for approximately 5 seconds.

Adjust head restraint to the desired position.

Removing rear seat head restraints:

Pull the head restraint up to its highest position. Depress the release button (2) next to the left head restraint post and pull out the head restraint.

Installing rear seat head restraints:

Insert the head restraint, push it down and adjust as desired. The release button will automatically return to its original position.

Warning!

For your protection, drive only with properly positioned head restraints.

Do not drive the vehicle without the seat head restraints. Head restraints are intended to help reduce injuries during an accident.

For positioning of head restraints refer *Head Restraints, Front* and *Head Restraints, Rear* in Index.