

1883


Rear Window Wiper Blade

Removal:

Fold wiper arm (1) away from rear window and rotate wiper blade (2) until perpendicular to wiper arm. Press safety tab (3) on pivot (4) and slide wiper blade out of wiper arm.

Installation:

Slide wiper blade onto wiper arm (arrow). Lock pivot in place on wiper arm end.

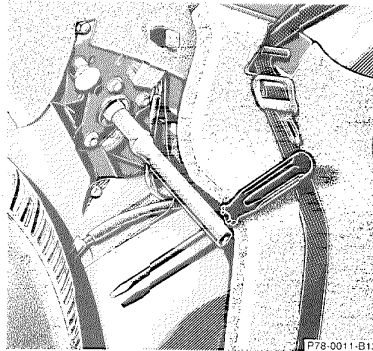

P78-0011-B13

Emergency Operation of Sliding Roof

The sliding roof can be opened or closed manually should an electrical malfunction occur.

Remove small access plug in left sidepanel of cargo area. Insert socket wrench (from tool kit) through opening in panel and place on the hexdrive of the electric motor. Turn socket wrench (manually) to open or close roof as desired.

To slide the roof closed or to raise the roof at the rear: turn clockwise.

To slide the roof open or to lower the roof at the rear: turn counter-clockwise.