

1342

Opening the Doors and Tailgate


From outside: pull handle (1) outwards.

From inside: pull handle (5) in door trim panel.

Tailgate

From outside: push button (1).

From inside: pull handle in trim panel.

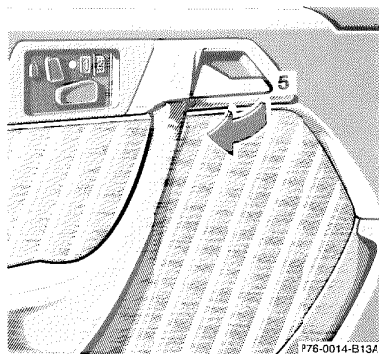

P76-0014-B13A

Locking and Unlocking of Doors and Tailgate

From the outside: turn key.

From the inside: actuate door lock button.

- 2 Unlocking
- 3 Locking
- 4 Separate locking of tailgate



P76-0027-B13

When the rear door and tailgate lock buttons are down, the rear doors and the tailgate cannot be opened from the outside or the inside, unless the door lock buttons are first pulled up.

The tailgate can be locked and unlocked from the outside using the master key at any time.

The driver's door can be locked only if it is closed and the door latch has properly engaged.