

the key is inserted in the steering lock without having been turned (key in position 0).

Tailgate


To unlock the tailgate and doors with the central locking system, turn the master key in the tailgate lock to the left (5) and let it return to the vertical position. Push in tailgate lock and lift up the tailgate to open. To lock the tailgate and doors, turn the master key to the right (3) and let it return to the vertical position.

The tailgate can remain locked while the central locking system is unlocked (e.g. while driving or when leaving the vehicle in a situation where it must be driven using the valet key but you wish the tailgate to remain locked at parking lots, workshops etc.).

Turn the master key completely to the right (4) and let it return to the vertical position. Now the tailgate can only be unlocked with the master key by turning it left to position 2, to permit unlocking via the central locking system later on, or by turning it completely to the left (5) for opening the tailgate.


Note:

If the fuel filler flap cannot be opened, refer to *Manual Release of Fuel Filler Flap* (see Index).

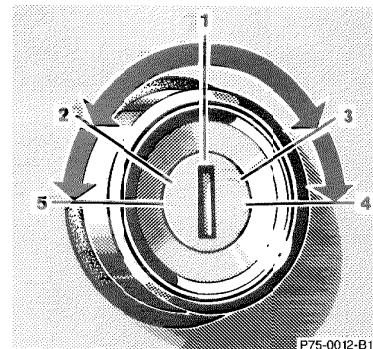

Locking and Unlocking at Tailgate Lock

- 1 Neutral position – push to open
- 2 Disengage separate locking of tailgate
- 3 Locking (via Central Locking System)
- 4 Separate locking of tailgate
- 5 Unlocking (via Central Locking System)

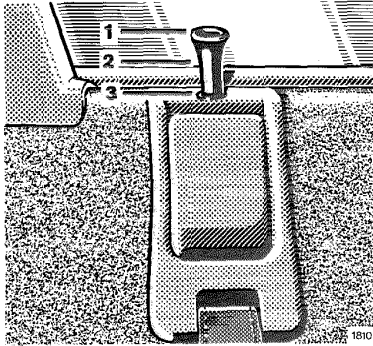

Locking button in tailgate

- 1 Vehicle unlocked.
- 2 Vehicle locked (via Central Locking System)
- 3 Vehicle locked (Tailgate is additionally secured.)

Power Windows and Sliding Pop-Up Roof

Hold key in door lock in the locking position (3) or in tailgate in the separate locking position (4). The windows and the sliding/pop-up roof begin to close automatically after approx. 1 second.

Warning!

Never close the windows or sliding/pop-up roof if there is the possibility of anyone being harmed by the closing procedure.

In case the closing procedure causes potential danger, the closing procedure can be immediately reversed by turning the key to the unlocking position (2) within 10 seconds. The sliding/pop-up roof and windows will open again. The sliding/pop-up roof will only open if it was not fully closed.

Note:

If the closing procedure is interrupted, it can only be continued by first turning the key to the unlocked position (2) and then again to the door locking position (3) or in tailgate in the separate locking position (4).