



P82-1094-B13

1 Indicator lamp in center console

Anti-Theft Alarm System

The anti-theft alarm is automatically armed 15 seconds after locking either door or the tailgate with any of your vehicle's keys.

A blinking lamp (1) indicates that the alarm is armed. Now the engine cannot be started.

The anti-theft alarm is disarmed when unlocking either door or the tailgate with any of your vehicle's keys.

Operation:

Once the alarm system has been armed, the exterior vehicle lamps will flash and the horn will sound intermittently when someone:

- opens a door,
- opens the tailgate,
- opens the hood,
- removes the radio,
- switches on or bridges the ignition circuit,
- steps on the brake pedal.

The alarm will last approximately 150 seconds in the form of blinking exterior lamps. At the same time an alarm horn will sound intermittently for 60 seconds, pause for 30 seconds, and repeat for another 60 seconds.

The alarm will stay on even if the activating element (a door, for example) is immediately closed.

Note:

We recommend that you carry the flat key safely with you so that it is always handy. This key has the same function as the master key.