

Power Seats, Front


The switches are located in each front door.

Warning!

Do not adjust the driver's seat while driving. Adjusting the seat while driving could cause the driver to lose control of the vehicle.

Never ride in a moving vehicle with the seat back reclined. Sitting in an excessively reclined position can be dangerous. You could slide under the seat belt in a collision. If you slide under it, the belt would apply force at the abdomen or neck. That could cause serious or even fatal injuries. The seat back and seat belts provide the best restraint when the wearer is in an upright position and belts are properly positioned on the body.

Never place hands under seat or near any moving parts while a seat is being adjusted.

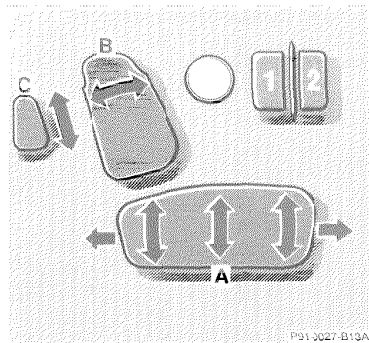

Turn key in steering lock to position 1 or 2 (with the driver's or front passenger's door open, the power seats can also be operated with the key removed or in steering lock position 0).

Seat and head restraint adjustment:

A Seat cushion adjustment.

B Seatback adjustment.

C Head restraint adjustment.

Adjust head restraint to support the back of the head approximately at ear level. The head restraint can also be turned forward by hand.


Note:

Your car is equipped with power head restraints, do not try to operate manually.

Warning!

When leaving the vehicle always remove the key from the steering lock.

The power seats can also be operated with the driver's or front passenger door open. Do not leave children unattended in the vehicle. Unsupervised use of vehicle equipment may cause serious personal injury.

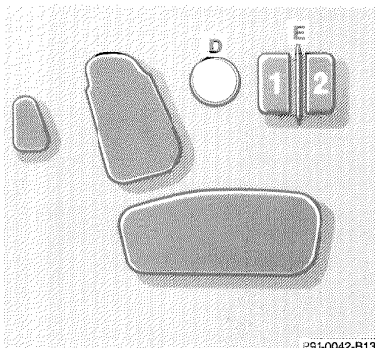

Storing seat/head restraint/
steering wheel positions in
memory:

D Memory button.

E Position buttons "1" and "2".

Two sets of seat/head restraint/
steering wheel positions may be
programmed into memory. After
the seat/head restraint/steering
wheel are positioned, push me-
mory button D, release, and within
3 seconds push position button
"1". A second set of positions for

the same seat/head restraint/
steering wheel can be program-
med into memory by pushing first
button D and then "2".

Recalling seat/head restraint/
steering wheel positions stored in
memory:

To recall a seat/head restraint/
steering wheel position, push
position button "1" or "2" until
seat/head restraint/steering wheel
movement has stopped. For safety
reasons, the seat/head restraint/
steering wheel movement stops
after releasing the position button.

Note:

See Index for instructions on
*adjusting telescopic steering
column.*

Caution!

Do not remove head restraints
except when mounting seat cov-
ers. For removal and installation
refer to *Head Restraints, Removal*
in Index. Whenever restraints have
been removed be sure to reinstall
them before driving.

Important!

Prior to operating the vehicle, the
driver should adjust the seat
height for proper vision as well as
fore/aft placement and seat back
angle to insure adequate control,
reach, operation, and comfort. The
head restraint should also be
adjusted for proper height.

Both the inside and outside rear
view mirrors should be adjusted
for adequate rearward vision.
Fasten seat belts. Infants and
small children should be seated in
a properly secured restraint
system that complies with U.S.
Federal Motor Vehicle Safety
Standard 213 and Canadian Motor
Vehicle Safety Standard 213.1.

All seat, head restraint, and rear
view mirror adjustments as well as
fastening of seat belts should be
done before the vehicle is put into
motion.