



P46-0009-B13

### Adjusting Telescopic Steering Column

Turn key in steering lock to position 1 or 2 (with the driver's or front passenger's door open, the telescopic steering column can be operated with the key removed or in steering lock position 0).

To lengthen or shorten the steering column, actuate the switch (1).

#### Note:

If the vehicle is equipped with front power seats with memory, the steering wheel position is stored in memory with the seat and head restraint position.

### Warning!

**Do not adjust the steering wheel while driving. Adjusting the steering wheel while driving could cause the driver to lose control of the vehicle.**