


Rear-Facing Bench Seat

The rear-facing bench seat can be unfolded to enlarge the seating area.

Warning!

Prior to occupying the rear-facing bench seat, the rear seat backrests must be in an upright position and locked in place. Hook the safety belts into the brackets provided.


By pressing down on the handle, lift the backrest into place. Raise the seat cushion in a similar manner.

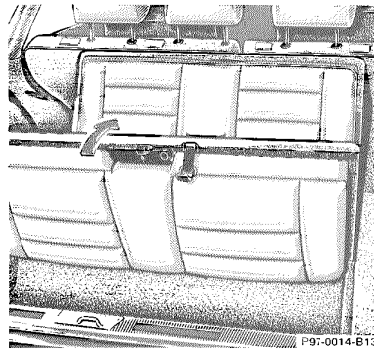

Note:

If the rear-facing bench seat is to be occupied, the forward-facing split rear bench seat must be equipped with head restraints.

To stow the rear-facing bench seat, proceed in reverse order, pulling the seat cushion up by its strap.

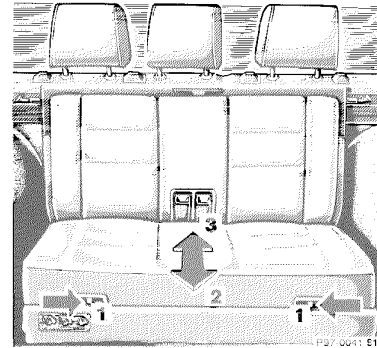

Rear-Facing Seat Cushion – Removal and Installation

By removing the rear-facing seat cushion, if so equipped, an additional cargo compartment is available which can be locked with the master key.

Removal: Press the two seat latches (1) towards the center of the car and pull the seat cushion up a little and then back (2).

Installation: Place the seat cushion on the floor of the cargo area and push it forward (3) and down until it locks in place.