


## Combination Switch

- 1 Low beam (with exterior lamp switch turned to position )
- 2 High beam (with exterior lamp switch turned to position )
- 3 High beam flasher (high beam available independent of exterior lamp switch position)
- 4 Turn signals, right
- 5 Turn signals, left

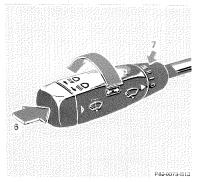

To operate the turn signals, move the combination switch past the point of resistance (up or down). The switch is automatically canceled when the steering wheel is turned to a large enough degree.

To signa minor directional changes, such as changing lanes on a highway, move combination switch to the point of resistance only and hold it there.

## 6 Control for

- windshield washer system
- headlamp cleaning system
  (will work only with exterior
  lamp switch in position
  or
  Canada only:
  Also in position
  only:
  when the engine is running)

When the washer system is activated, the wiper also operates for a limited time.

- 7 Windshield wiper control
  - 0 Wiper off
  - Intermittent wiping
  - II Normal wiper speed
  - III Fast wiper speed

## Note:

The reservoir, hoses and nozzles of the windshield washer and headlamp cleaning systems are automatically heated.