


Interior Lamps

The switch for the front lamp (combination interior and reading lamp) has 4 positions.

- 1 Interior and reading lamp switched on continuously.
- 2 Interior and reading lamp switched off.
- 3 Reading lamp switched on continuously.
- 4 Interior lamp is switched on, and off delayed, by the front door contact switches. However, there will be no delay when the key is in steering lock position 2).

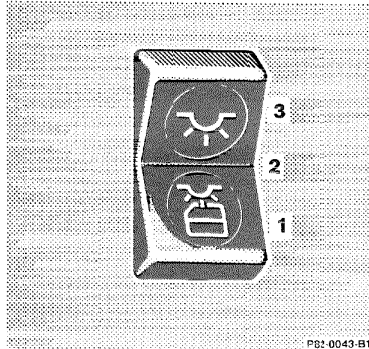

The switch for the rear dome lamps has three positions.

- 1 The lamps are switched on and off by the opening and closing of the rear doors and tailgate.
- 2 The lamps are switched off.
- 3 The lamps are switched on continuously.

Entrance Lamps, Exit Lamps in Doors

The lamps are switched on and off by the door contact switches.

Note:

To prevent the vehicle battery from being discharged, do not leave doors open for a long period of time.