


### Sun Visors

Swing sun visors down to protect against sun glare.

If sunlight enters through a side window, disengage visor from inner mounting and pivot to the side. From this position, the visor can slide forward and backward on its shaft.

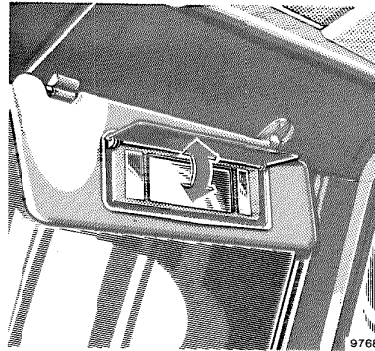


### Vanity mirror:

With the visor engaged in its inner mounting, the lamp can be switched on by opening the cover.

#### **Warning!**

**Do not use the vanity mirror while driving.**

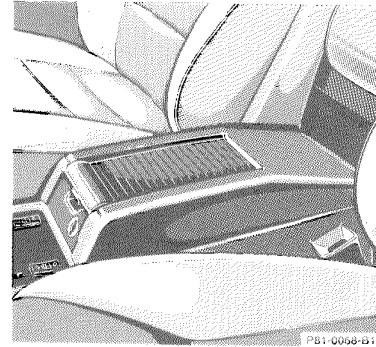

### Lockable Storage Compartment

A lockable storage compartment is located in the center console.