

P67-0020-B13A

### Power Windows


Switch group for power windows:

- 1 left, front
- 2 left, rear
- 3 right, front
- 4 right, rear
- 5 safety switch
- 6 individual switches (rear doors)

Turn key in steering lock to position 1 or 2.

The power windows can be operated as follows:

- By using the switch group on the center console, with one switch (1 – 4) per window.

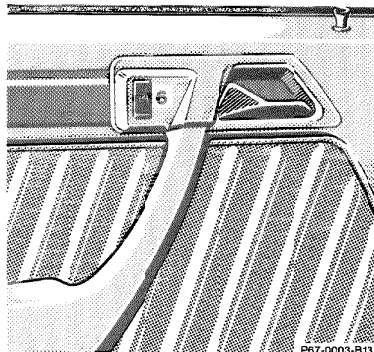


P67-0003-B13

- By using the switch (6) in each rear door panel.

Operation:




Press switch up to resistance point:

 to close

 to open

Release switch when window is in desired position.

Front door windows:

Press switch  past resistance point and release – window lowers to fully open position. To interrupt procedure, briefly press  or .

If inadvertent operation of the rear windows by switch (6) (for instance by children) is to be prevented, slide safety switch (5) to the right (symbol becomes visible).

#### Warning!

**When leaving the vehicle, always remove the key from the steering lock. Do not leave children unattended in the vehicle. Unsupervised use of vehicle equipment can cause serious personal injury.**

The power windows can also be closed with the key while locking the vehicle doors or tailgate (see *Central Locking System* in Index).

#### Warning!

**When closing the windows, be sure that there is no danger of anyone being harmed by the closing procedure.**