

Reservoirs for Windshield Washer and Headlamp Cleaning Systems

The reservoir for the windshield washer and headlamp cleaning systems is located in the engine compartment.


The reservoir for the rear window washing system is located behind the panel on the RH side in the cargo area.

To open the panel, first place cargo tie-down eyelet flat against rear wall, then pull handle and fold down panel.

Refilling windshield washer reservoir:

Refill with MB Windshield Washer Concentrate "S" and water for temperatures above freezing or MB Windshield Washer Concentrate "S" and commercially available premixed windshield washer solvent/antifreeze for temperatures below freezing. Follow mixing ratio on package. Test washer system for proper function.

Refer to *Capacities: Fuels, Coolants, Lubricants etc.* in Index.

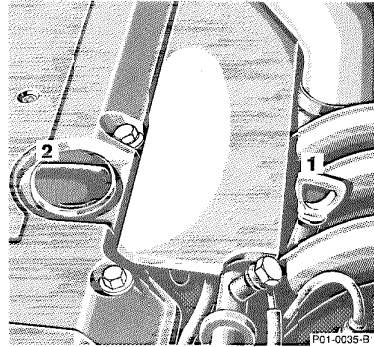


Checking Engine Oil Level

- 1 Oil dipstick
- 2 Oil filler cap

To check the engine oil level, park vehicle on level ground, with engine at normal operational temperature.

Check engine oil level approximately 5 minutes after stopping the engine, allowing for the oil to return to the oil pan.

Wipe oil dipstick clean prior to checking the engine oil level.

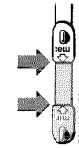

Oil level must be between the lower (min) and upper (max) mark of the dipstick.

Do not overfill the engine.
Excessive oil must be drained or siphoned.

For low engine oil level warning lamp, see index.