


First Aid Kit

The first aid kit (1) is stored behind the RH panel in the cargo area.

Note:

Before opening the RH panel, place cargo tie-down eyelet (2) flat against rear wall.

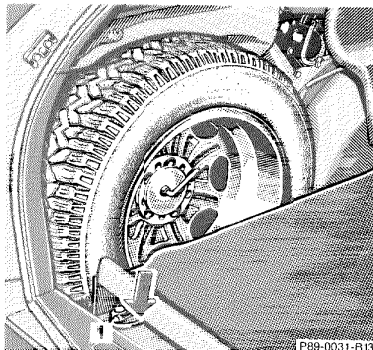

Spare Wheel, Vehicle Tools

The spare wheel and vehicle tools are stored behind the LH panel in the cargo area.

Note:

Before opening the LH panel, place cargo tie-down eyelet (1) flat on the floor.