


### Rear Seat Cushion

**Removal:** Push in locking tabs (1) (on left and right side of seat) and pull up seat at the front.

**Installation:** Slide rear edge of cushion under the backrest so that both wire loops under the backrest engage at the seat cushion. Push front of cushion down until it locks in place.

### Caution!

Watch out for sharp edges when removing or installing the rear seat cushion, and make sure that it is securely locked in place again, to prevent injury.

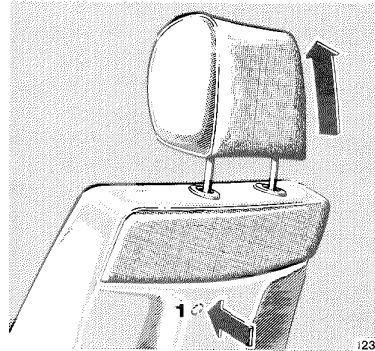

### Front Head Restraints

The release button (1) is located below the left head restraint post on both front seats.

**Removal:**

Bring the head restraint to its highest position.

Depress release button (1) beneath the seatback covering material and pull head restraint up sharply, holding it by the left head restraint post (viewed in driving direction). Then pull out head restraint completely with both hands.

**Installation:**

Insert the head restraint and push it down to the stop.

Check if the highest position can be reached by pushing the switch up for approximately 5 seconds.

Adjust head restraint to the desired position.

### Warning!

**For your protection, drive only with properly positioned head restraints.**

**Do not drive the vehicle without the seat head restraints. Head restraints are intended to help reduce injuries during an accident.**

For positioning of head restraints refer to sections *Power Seats, Front, and Head Restraints, Rear* in Index.