

Indicator Lamp Symbols

Function Indicator Lamp



High beam

Warning Lamps

(should go out with the engine running unless)



ASR.
Adjust driving to road condition.
See Index



Battery not being charged.
See Index



Brake fluid low (except Canada).
Parking brake engaged.
See Index



Brake fluid low (Canada only).
Parking brake engaged.
See Index



Brake pads worn down.
See Index



Engine oil level low.
See Index



Coolant level low.
See Index



Fluid level for windshield and
headlamp washer system low.
See Index



Exterior lamp failure.
See Index



ABS malfunction.
See Index



SRS malfunction.
See Index



ASR malfunction.
See Index



Engine malfunction indicator lamp.
If the lamp comes on when the
engine is running, it indicates a
malfunction in the fuel injection
system or emission control system. In
either case, we recommend that you
have the malfunction checked as
soon as possible. See Index