


Car Keys

Included with your vehicle are:

- 2 Master keys,
- 1 Valet key,
- 1 Flat key.


Any of these keys arm/disarm the anti-theft alarm system.

Master Key

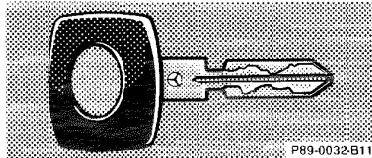


The master key fits all locks on the car.

Valet Key

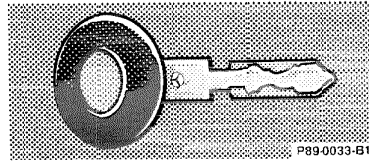

The valet key works only in the door locks and the steering lock. The valet key will not work in the trunk and the lockable storage compartment.

Flat Key

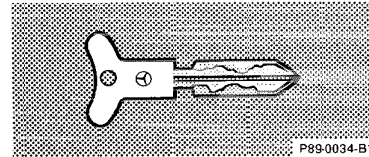

The flat key fits all locks on the car.

Notes:

Do not give the master key to an unauthorized person.

We recommend that you carry the flat key with you and keep it in a safe place (e.g. your wallet) so that it is always handy. Never leave the flat key in the vehicle.

Warning!

When leaving the vehicle always remove the key from the steering lock. Do not leave children unattended in the vehicle. Unsupervised use of vehicle equipment may cause serious personal injury.

Obtaining Replacement Keys

Your vehicle is equipped with a theft deterrent locking system requiring a special key manufacturing process. For security reasons, replacement keys can only be obtained from your authorized Mercedes-Benz dealer.