


Head Restraints, Rear

Folding head restraints backward (with engine running):

Press symbol-side of rocker switch to release the head restraints. The head restraints will then fold backward for increased rear visibility.

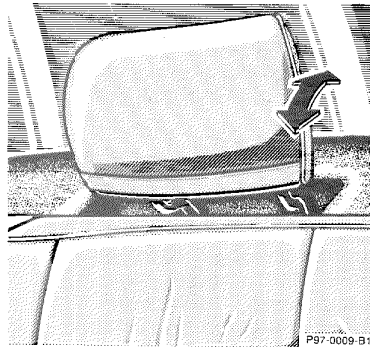

Placing head restraints upright:

Pull head restraint forward until it locks in position.

Inclination of head restraints:

The head restraint inclination can be adjusted manually.

Notes:

For safety reasons, always drive with the rear head restraints in the upright position when the rear seats are occupied.

To prevent damage to the rear window sunshade, position the head restraints upright only with the sunshade fully retracted.

Upright head restraints can only be folded backward with the sunshade fully retracted.