


Lockable Storage Compartment

A lockable storage compartment is located in the center console.

Caution!

Keep compartment lid closed. This will prevent stored objects from being thrown about and injuring vehicle occupants during an accident.

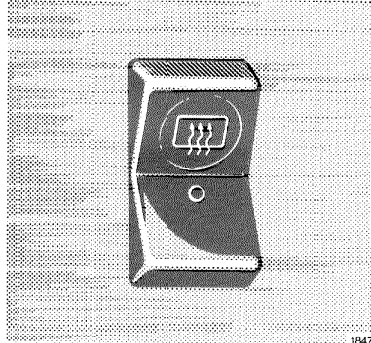

Rear Window Defroster

The switch is located in the center console.

Turn key in steering lock to position 1 or 2.

Press symbol side of rocker switch to turn on, bottom to turn off.

When activating the rear window defroster, the indicator lamp in the switch will come on.

Note:

Heavy accumulation of snow and ice should be removed before activating the defroster. The rear window defroster uses a large amount of power. To keep the battery drain to a minimum, turn off the defroster as soon as the window is clear. The defroster is automatically turned off after a maximum of 20 minutes of operation.

If several power consumers are turned on simultaneously, or the battery is only partially charged, it is possible that the defroster will automatically turn itself off. When this happens, the indicator lamp inside the switch starts blinking. As soon as the battery has sufficient voltage, the defroster automatically turns itself back on.