


Interior Lamps

The switch for the front lamp (combination interior and reading lamp) has 4 positions.

- 1 Interior and reading lamp switched on continuously.
- 2 Interior and reading lamp switched off.
- 3 Reading lamp switched on continuously.
- 4 Interior lamp is switched on, and off delayed, by the front door contact switches. However, there will be no delay when the key is in steering lock position 2.

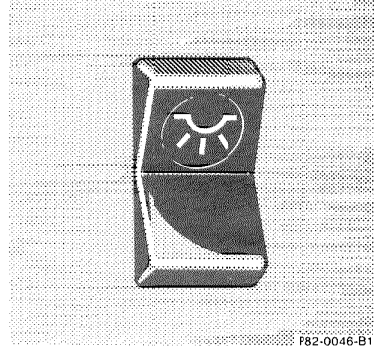

The rear courtesy lamp is switched on and off by the rear door contact switches or by the rocker switch on the instrument panel.

The reading lamps in the rear passenger compartment are switched on and off by a switch in each lamp.

Entrance Lamps, Exit Lamps in Doors

The lamps are switched on and off by the door contact switches.

Note:

To prevent the vehicle battery from being discharged, do not leave doors open for a long period of time.