

P67-0020-B13A

Power Windows


Switch group for power windows:

- 1 left, front
- 2 left, rear
- 3 right, front
- 4 right, rear
- 5 safety switch
- 6 individual switches (rear doors)

Turn key in steering lock to position 1 or 2.

The power windows can be operated as follows:

- By using the switch group on the center console, with one switch (1 - 4) per window.

 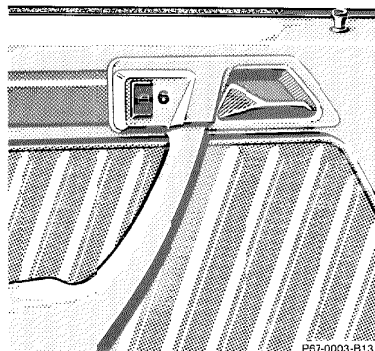


P67-0003-B13

 
- By using the switch (6) in each rear door panel.

Operation:

Press switch in to resistance point:






to close



to open

Release switch when window is in desired position.

Front door windows:

Press switch  past resistance point and release – window lowers to fully open position. To interrupt procedure, briefly press  or .

If inadvertent operation of the rear windows by switch (6) (for instance by children) is to be prevented, slide safety switch (5) to the right (symbol becomes visible).

Warning!

When leaving the vehicle, always remove the key from the steering lock. Do not leave children unattended in the vehicle. Unsupervised use of vehicle equipment can cause serious personal injury.

The power windows can also be closed with the key while locking the vehicle doors or trunk (see *Central Locking System* in Index).

Warning!

When closing the windows, be sure that there is no danger of anyone being harmed by the closing procedure.