

Snow Chains

Use only snow chains that are tested and recommended by Mercedes-Benz. Your authorized Mercedes-Benz dealer will be glad to advise you on this subject.

Chains should only be used on the rear wheels. Follow the manufacturer's mounting instructions.

Snow chains should only be driven on snow at speeds not to exceed 30 mph (50 km/h). Remove chains as soon as possible when driving on roads without snow.

For tips on driving on slippery winter roads refer to Index.

Vehicles with Acceleration Slip Regulation (ASR):

When driving with snow chains, press the snow chain switch, refer to Index.

Important!

Use of snow chains on Model E 320:

Standard model (without Sportline option) – permissible only on standard equipment tire size 195/65.

Sportline model – permissible on tire size 205/60 or winter tire size 195/65 R 15 91 T M + S.

See "Rim - Tires" in section *Technical Data* (see Index).