

To check the engine oil level, park vehicle on level ground, with engine at normal operational temperature.

Check engine oil level approximately 5 minutes after stopping the engine, allowing for the oil to return to the oil pan.

Wipe cil dipstick clean prior to checking the engine oil level.



Oil level must be between the lower (min) and upper (max) mark of the dipstick.

Do not overfill the engine. Excessive oil must be drained or siphoned.

For low engine oil level warning lamp, see Index.

Example
Checking Engine Oil Level

1 Oil dipstick 2 Oil filler cap