


### License Plate Lamps (5 W bulb)

Loosen both securing screws (1),  
remove lamp and take out bulb.

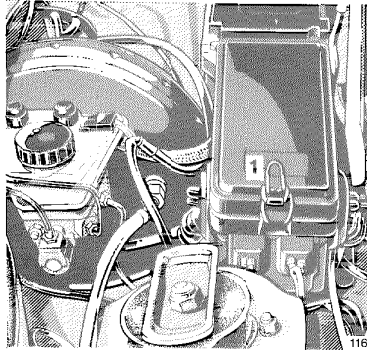

### Fuses

The fuse box is located in the  
engine compartment.

All equipment protected by fuses  
is listed by number and letter on a  
label in the lid of the fuse box. The  
numbers and letters above the  
fuses correspond to the ones on  
the label.

To gain access to the fuses, re-  
lease clamp (1), lift the fuse box  
cover up and remove.

Before replacing a blown fuse,  
determine the cause of the short  
circuit.

Spare fuses are furnished inside  
the fuse box. Observe amperage  
and color of fuse.

Always use a new fuse for re-  
placement. Never attempt to re-  
pair or bridge a blown fuse.

After replacing the fuse, engage  
the fuse box cover at the rear and  
secure with clamp (1).

