

Important!

A discharged battery can freeze at approx. +14°F (-10°C). In that case it must be thawed out before jumper cables are used. A frozen battery can explode and cause personal injury.

Jumper cables specifications:


- Minimum cable cross-section of 25 mm² or approx. 2 AWG
- Maximum length of 11.5 ft (3.5 m).

Warning!

Never lean over batteries while connecting or jump starting, you might get injured.

Battery fluid contains sulfuric acid. Do not allow this fluid to come in contact with eyes, skin, or clothing. In case it does, immediately flush affected area with water, and seek medical help.

A battery will also produce hydrogen gas, which is flammable and explosive. Keep flames or sparks away from battery, avoid improper connection of jumper cables, smoking etc..

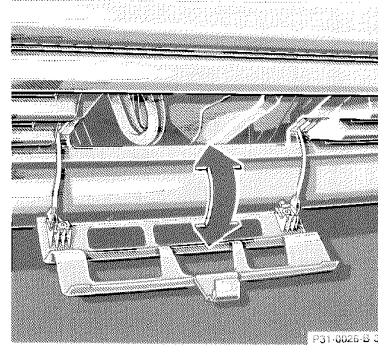

Towing the Vehicle

The rear towing eye is located at the right, below the bumper. The front towing eye is located on the passenger side behind a flap in the bumper panel.

Flap removal: Insert finger in the flap opening and pull out.

To install the flap, engage the flap at the top and press in the bottom securely.

We recommend that the vehicle be transported using flat bed equipment. This method is preferable to other types of towing.

The vehicle may be towed with all wheels on the ground and the selector lever in position "N" for distances up to 30 miles (50 km) and at a speed not to exceed 30 mph (50 km/h).

To positively avoid a possibility of damage to the transmission, however, we recommend to disconnect the drive shaft at the rear axle drive flange on any towing beyond a short tow to a nearby garage.

Do not tow with sling-type equipment. Towing with sling-type equipment over bumpy roads will damage radiator and supports.

Use wheel lift or flat bed equipment.


Warning!

With the engine not running, there is no power assistance for the braking and steering systems. In this case, it is important to keep in mind that a considerably higher degree of effort is necessary to brake and steer the vehicle.

Vehicles with Acceleration Slip Regulation (ASR)

Caution!

If the vehicle is towed with the front axle raised, the key must not be in steering lock position 2. Otherwise, the acceleration slip regulation will immediately be engaged and will apply the rear wheel brakes.

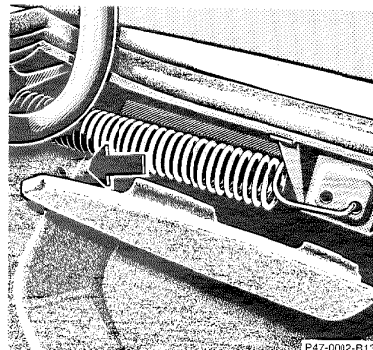

Manual Release of Fuel Filler Flap

Sedan:

Bend the top of the right trunk panel down slightly. Pull the manual release knob while simultaneously opening the fuel filler flap.