


82-0512 R and R front, rear and door loudspeakers


A Front loudspeaker

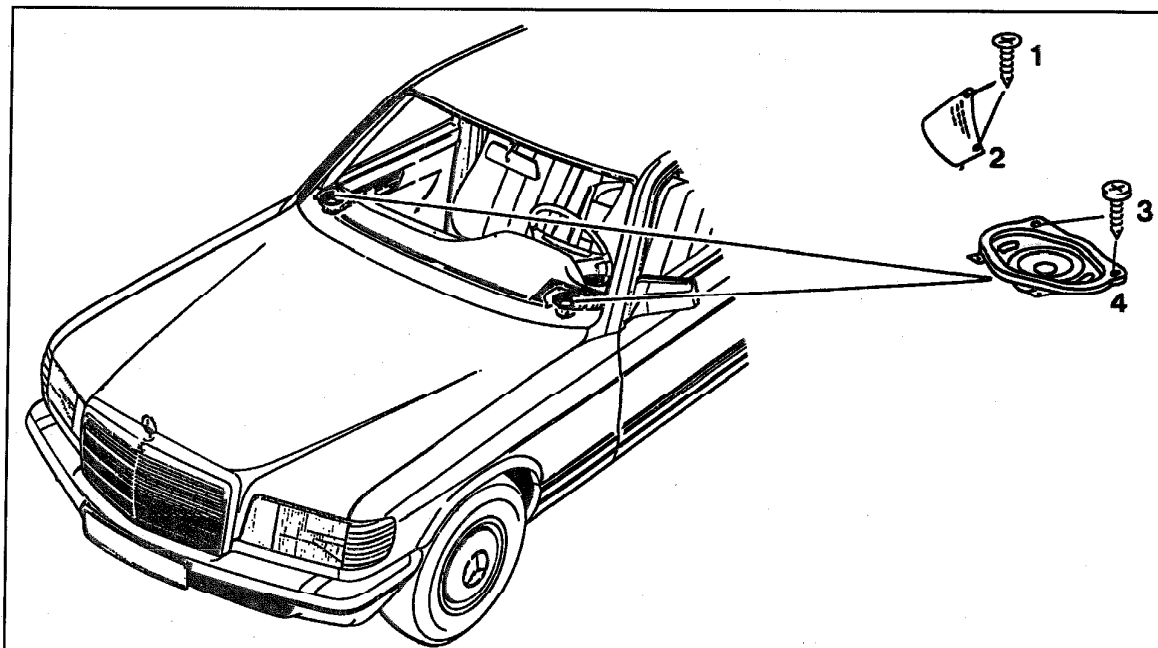

P82-0131-55

Mounting screws (1)	unscrew, screw in.
Cover (2)	lift and remove to the rear, install.
Mounting screws (3)	unscrew, screw in.
Loudspeaker (4)	lift, remove to the rear and pull off wire, fit wire and insert loudspeaker.


B. Rear loudspeaker

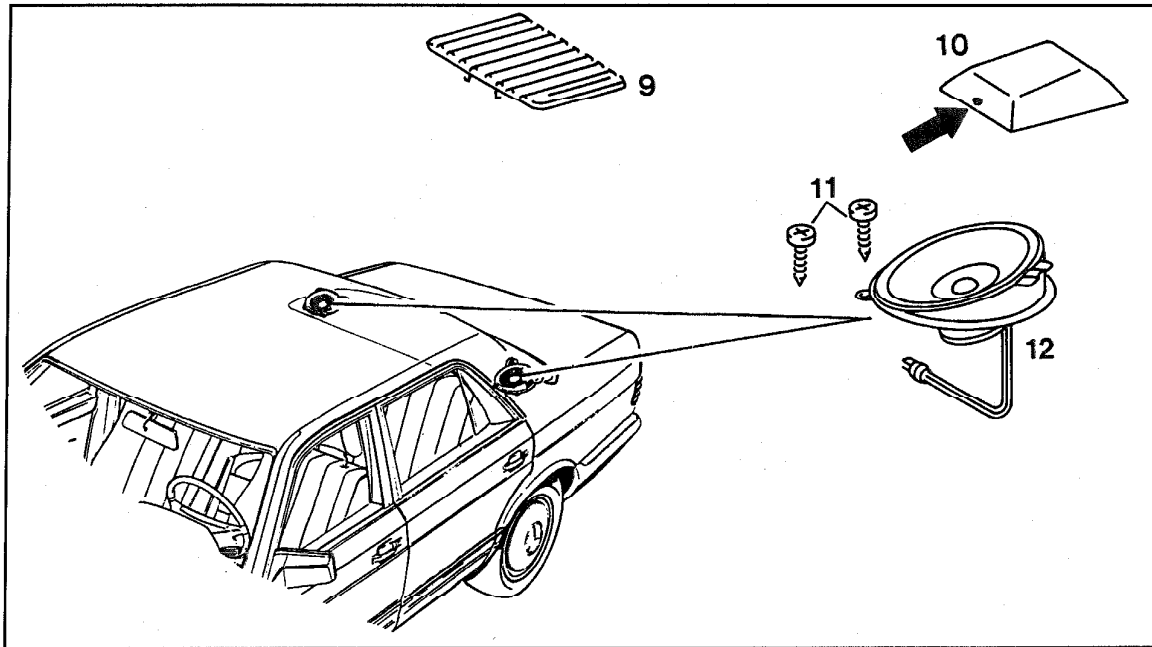

P82-0132-55

Cover (9)	unclip, clip in (only 1st version).
Cover (10)	unclip front (arrow) and remove from the front, push in from the front and clip in.
Mounting screws (11)	unscrew, screw in.
Loudspeaker (12)	remove and pull off wire, refit and insert loudspeaker.

C. Loudspeaker in door (only sound system)

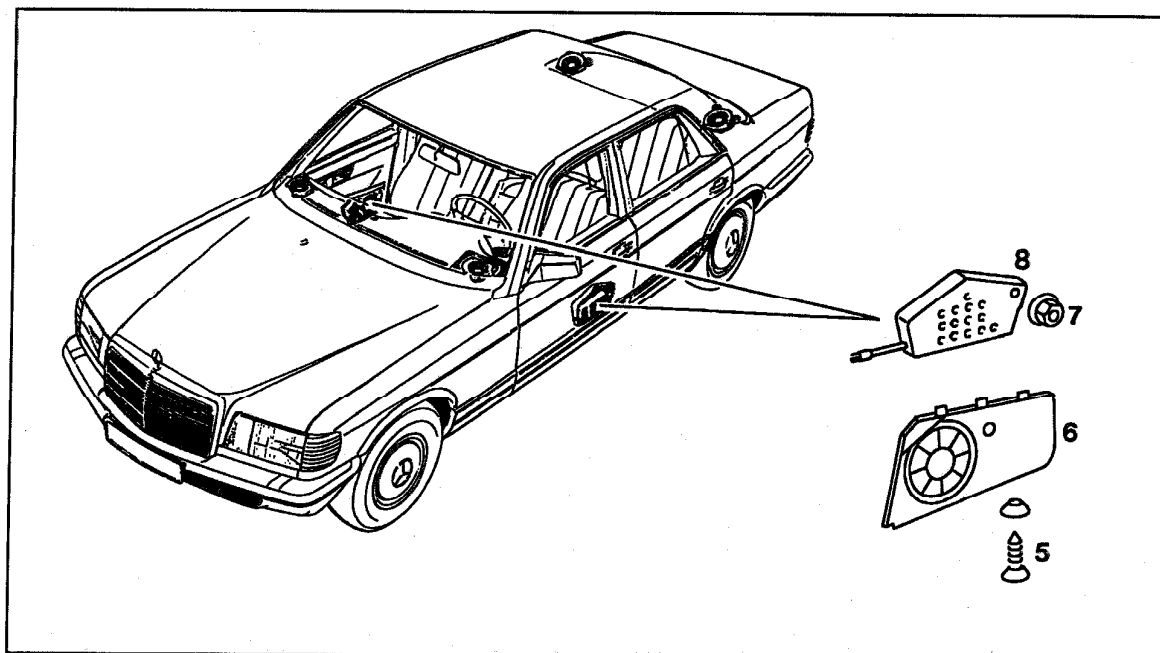

P82-0130-55

Mounting screws (5)	unscrew, screw in.
Cover (6)	lift and remove downwards, insert.
Mounting nut (7)	unscrew, screw in.
Loudspeaker (8)	remove and pull off wire, fit wire and insert loudspeaker.