


The plastic wheel trim cover (5) is mounted to the steel rim by means of six retaining cams (5a) and the annular spring (7).

- 1 Rim
- 2 Balancing weight
- 3 Retaining clip for balancing weight
- 5 Wheel trim cover
- 5a Retaining cams
- 7 Annular spring

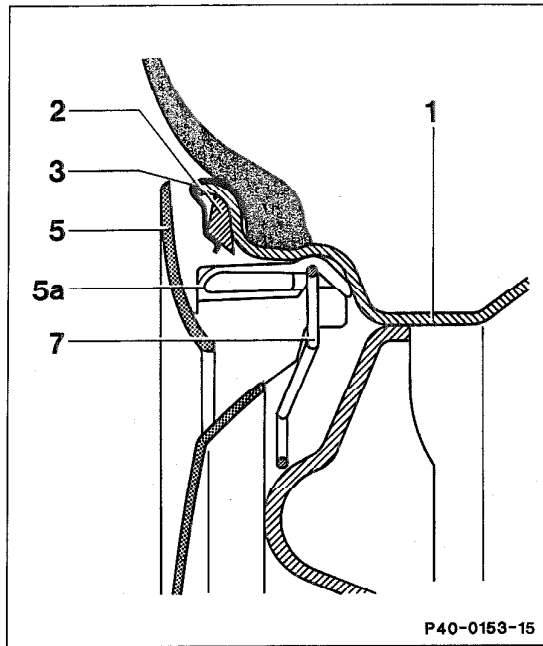


P40-0153-15

P40-0153-15

#### Removing wheel trim cover

Hold wheel trim cover with both hands at the top of the wheel and pull off.

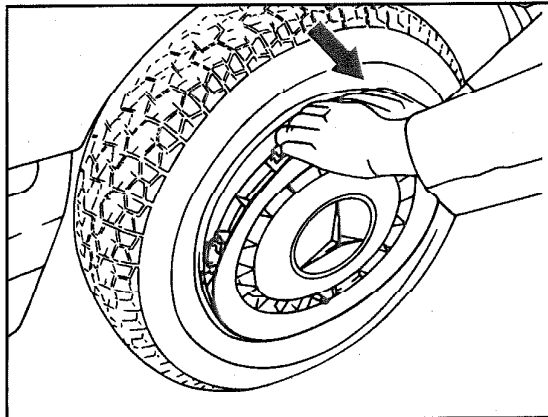

Shown with 14" wheel trim cover

P40-2243-13


#### Mounting wheel trim cover

Position wheel with the valve facing down. Start wheel trim cover with the valve recess at the bottom, push wheel trim cover up and press on at the top in this position.

When pressing on the wheel trim cover ensure that the retaining cams are properly introduced into the rim. This is particularly important if the balancing weight coincides with a retaining cam.

#### CAUTION!

Do not strike the center of the wheel trim cover.

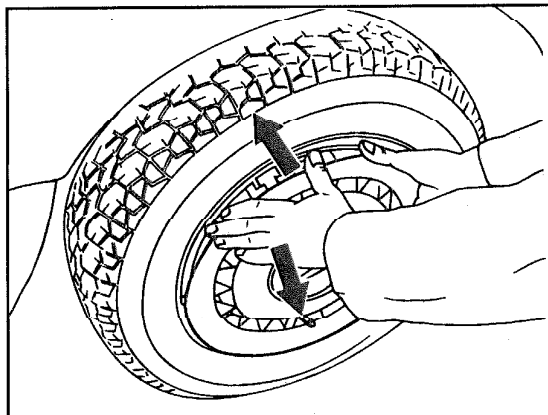

P40-2242-13