


42-0035 Checking warning device in reservoir

Note

The warning light in the instrument cluster is a combination light, this means it illuminates when:

- a) parking brake is actuated.
- b) brake fluid level in one of the chambers of the brake fluid reservoir is too low.

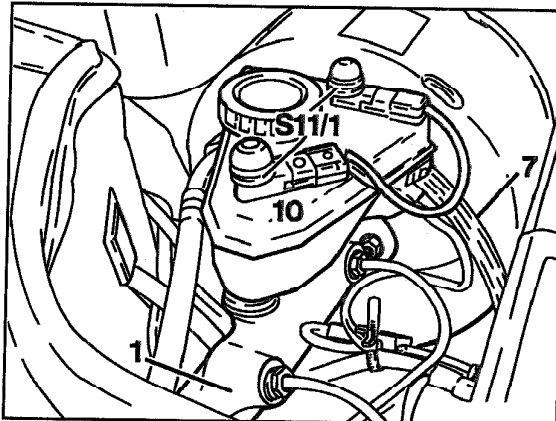

P42-2171-13

Check Press down the two contacts (S11/1) one after another. This causes the contact to close and the warning light should illuminate. The contact inserts cannot be removed.