


P42-2101-13

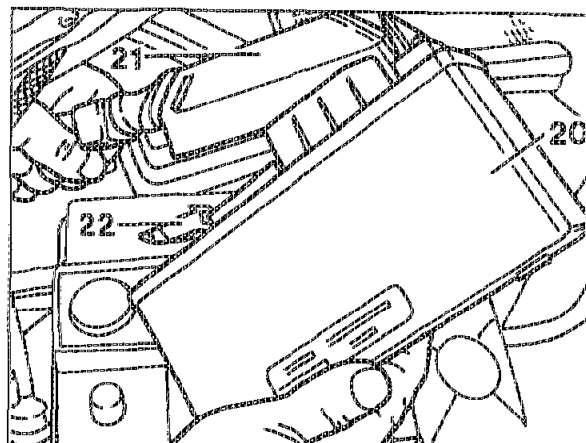

P42-2328-13

- Ignition
- Locking device (22)

- ABS/ASR control module (N30/1)
- Test program

OFF.

operate and detach plug (21) from ABS/ASR control module (N30/1).

If the plug (21) is plugged into the ABS/ASR control module (N30/1), ensure that it engages audibly in the locking device (22).

remove from bracket, install.

perform (42-0822).