



⚠ CAUTION!

Only remove and install overvoltage protection with ignition switched off.

Ignition
Overvoltage protection (K1, K1/1, K1/2)

switch off, switch on.

with integrated relay at power supply of ABS control unit (N30): Check bushes in plug socket for corrosion, enlargement and contacting.

Note

Depending on the vehicle model and special equipment, a 5-, 7- or 9-pin overvoltage protection relay is installed.