

## 77-050 R and R headliner of sliding/lifting roof

---

### Removal

---

- 1 With sliding roof opened by 3/4, unclip sliding roof headlining at the front (4 clips).
- 2 Completely open sliding roof.
- 3 Pull out sliding roof headlining in forward and upward direction.
- 4 Check upper halves of clips on sliding roof headlining.
- 5 Check lower halves of clips on sliding roof.

### Installation

---

- 6 Close sliding roof and set both sliders to a horizontal position.
- 7 Completely open sliding roof.
- 8 Slip in sliding roof headlining from front top until the clips are knocking against sliding roof, while introducing tubing into protective tube on sliding roof headlining.
- 9 Close sliding roof by half and audibly fasten sliding roof headlining at the front by means of clips (4 each).
- 10 Close sliding roof, lift approximately by half at the rear and in this position check whether the lateral screening can be perfectly pulled out and in.

