

## 77-100 R and R sliding roof cover (panel)

---


### A. Sliding roof

#### a) Sedan


#### Removal

---

- 1 Remove sliding roof headlining (77-050).
- 2 Open sliding roof completely and remove slide rail at the left and right.

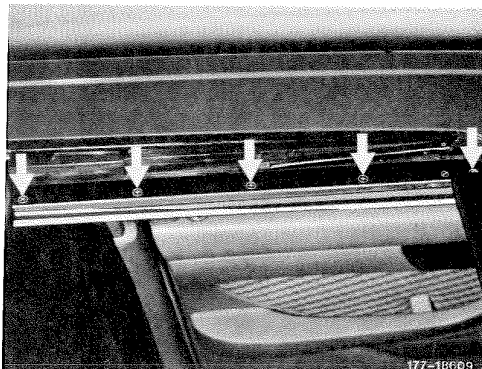


- 3 Close sliding roof and unscrew locking screw left and right.

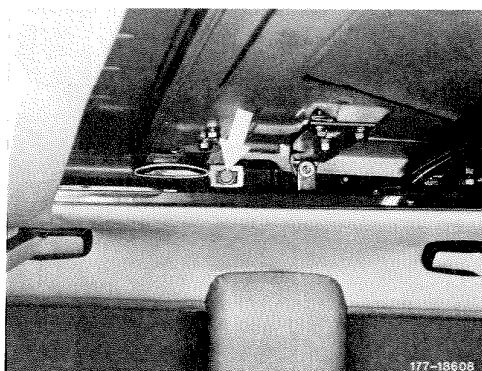

- 4 Unscrew guide plate at front of sliding roof frame and pull out connecting clip on cable control.

- 5 Let control run back.

- 6 Remove sliding roof cover in forward and upper direction.

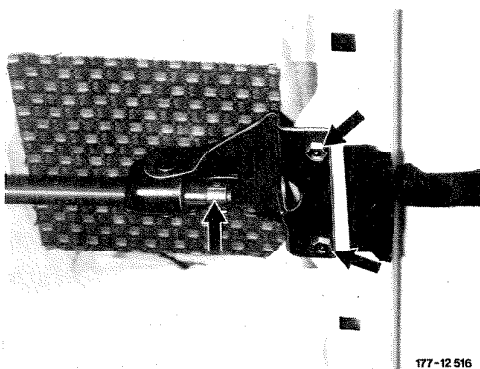

## 77-100 R and R sliding roof cover (panel)

### Installation

7 Coat slide jaws and slide rails prior to installation thoroughly with MB slide paste, part No. 001 989 14 51.

8 For further installation proceed vice versa.


**Note:** Prior to installation of sliding roof headlining adjust slide angle brackets and sliding roof cover as required (77-110).

### b) Coupe


### Removal

1 Remove sliding roof headlining (77-050).

2 Completely open sliding roof and remove slide rail at left and right.

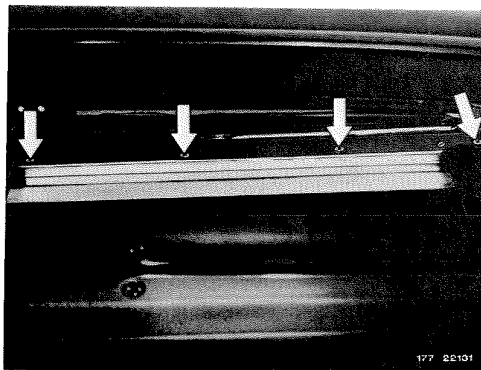

3 Close sliding roof and unscrew locking screw left and right.

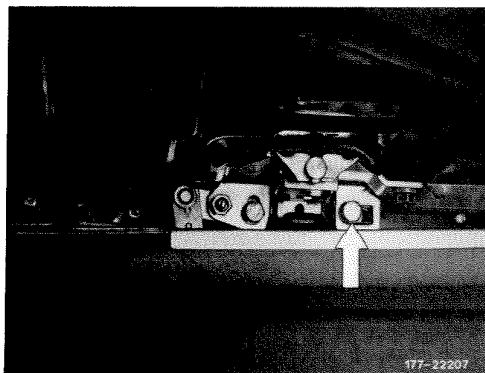

4 Unscrew guide plate on sliding roof frame rear.


5 Remove sliding roof cover at front in upward direction.

### Installation

6 Thoroughly clean slide jaws and slide rails prior to installation and coat with MB-slide paste, part no. 001 989 14 51.

7 For further installation proceed vice versa.

**Note:** Prior to assembly of sliding roof headlining, adjust slide angle brackets and sliding roof cover (77-110).

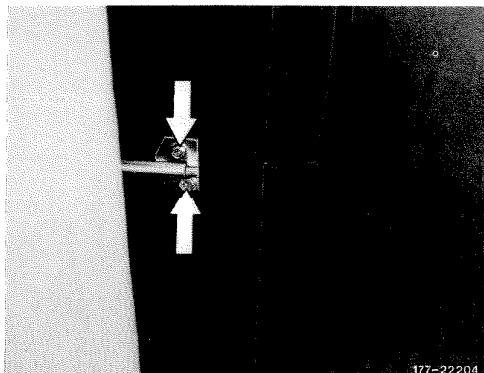


## 77-100 R and R sliding roof cover (panel)

---

### B. Sliding-lifting roof (sedan, coupe)


#### Special tool

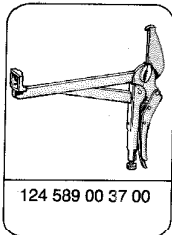


#### Removal

---


- 1 Remove sliding-lifting roof headlining (77-050).
- 2 Remove slide rail left and right.
- 3 Close sliding-lifting roof.

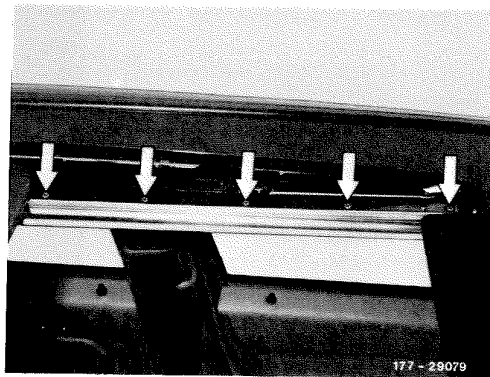

- 4 Unscrew nuts left and right.
- 5 Remove sliding-lifting roof cover in upward direction.

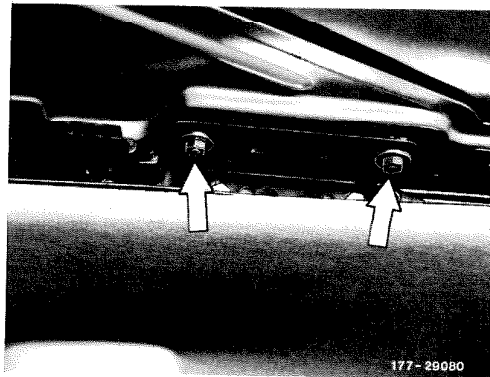

- 6 Make two centering pins (unless provided).

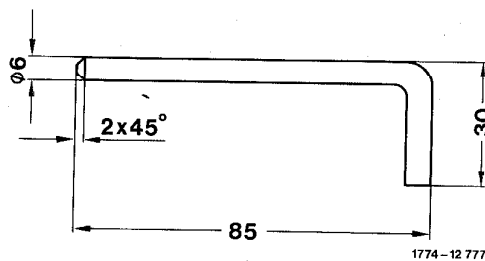


## 77-100 R and R sliding roof cover (panel)

---

7 Insert centering pin into centering bore at left and right.

8 Remove rear view mirror inside.

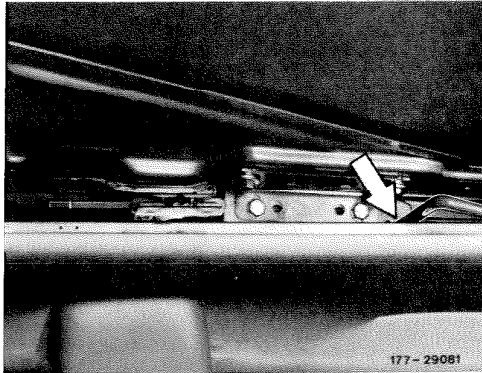

### Installation

---

9 Insert sliding-lifting roof cover from above, position nuts, pretension sliding-lifting roof cover with special tool, part No. 124 589 00 37 00 and tighten nuts.

10 For further installation proceed vice versa.

