


77-150 R and R tubing


A. Sliding roof

Removal

- 1 Remove control (77-140).
- 2 Remove mounting bracket with motor and gear unit (77-180).
- 3 Remove rear window (67-200).
- 4 Remove headlining starting at the rear up to center pillar (68-430).
- 5 Loosen insulation in range of tubing at sliding roof frame rear.
- 6 Pull off insulation on rear pillar rear left.
- 7 Unscrew fastening screws on holding plate for tubing on sliding roof frame.

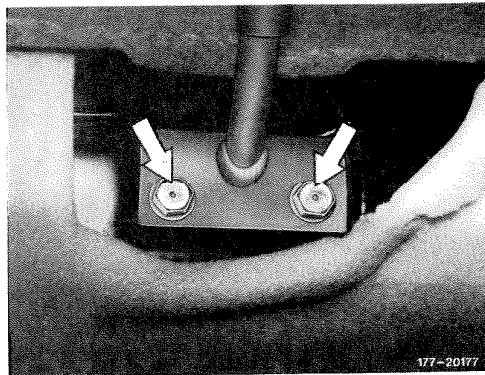


- 8 Unscrew screw on automatic reel for safety belt and put automatic reel aside.

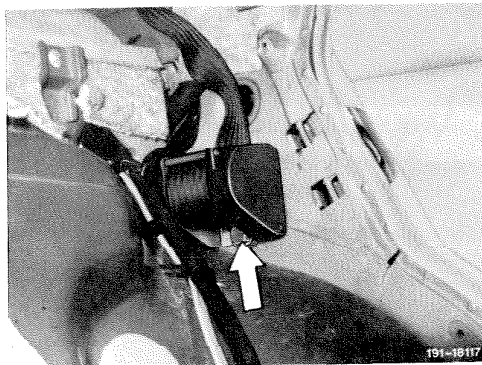

9 Unscrew fastening clamps for tubing on rear pillar.

10 Loosen sliding roof frame at the rear and push away slightly, while pushing tubing into trunk until tubing can be pulled out of sliding roof frame.

11 Pull tubing forward into vehicle interior and remove through cutout for rear window.

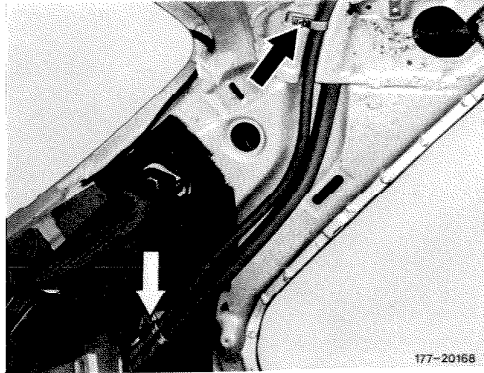

Installation

12 Introduce new tubing from inside vehicle first into trunk and then into sliding roof frame.

Attention!

Do not bend tubing during installation, since this will cause control to bind.

13 Install mounting bracket with motor and gear unit.

14 Attach tubing to sliding roof frame, roof frame and to rear pillar.

15 For further installation proceed vice versa.

B. Sliding-lifting roof

Removal

1 Remove control (77-140).

2 Remove motor and gear unit (77-180).


3 Remove sliding-lifting roof cover (77-100).

4 Expose headlining starting at the rear up to sliding-lifting roof cutout (Group 68).

5 Pull damping component from rear pillar, left.

77-150 R and R tubing

6 Unscrew holding plate on sliding-lifting roof frame and force off cover over tubing.

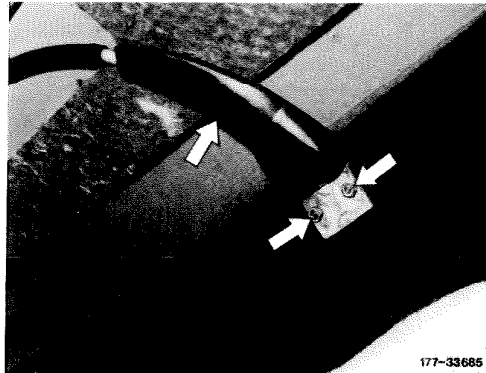


7 Unscrew fastening clip and belt guide fitting on rear pillar, left.

8 Loosen sliding-lifting roof frame in rear range.

9 Push sliding-lifting roof frame slightly down and extend tubing at sliding-lifting roof frame rear, sliding tubing into trunk for this purpose.

10 Remove tubing in forward direction.

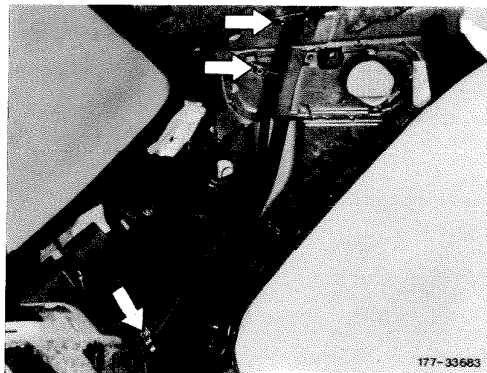

Installation

11 Introduce new tubing from vehicle interior first into trunk and then into sliding-lifting roof frame.

Attention!

Do not distort tubing during installation to prevent binding of control.

12 Fasten tubing to sliding-lifting roof frame and at rear pillar.

13 Install holder with motor and gear unit.

14 For further installation proceed vice versa.